SAMSUNG

HW-J7500
HW-J7501

User manual

Curved Soundbar

Imagine the possibilities

Thank you for purchasing this Samsung product.
To receive more complete service, please register your product at
www.samsung.com/register

FEATURES

Streaming Music Services

The Curved Soundbar makes diving into all your favourite music easier than ever before, thanks to its Wi-Fi capabilities. Simply access the Samsung Multiroom App to experience the best of the internet's subscription streaming music services.

Surround Sound Expansion

The Surround Sound Expansion feature adds depth and spaciousness to your listening experience.

TV SoundConnect

Connect your TV and Soundbar easily through Bluetooth with TV SoundConnect. The absence of trailing wires between the Soundbar and TV allows you to showcase the slim and sleek design of both systems, while maintaining a clean look in your living environment. Easily control the Soundbar and TV from a single TV remote.

Music Source Sharing (= Multiroom Play)

Controlling and sharing one music source across multiple audio devices in various locations is made easy with Multiroom Link. The mobile app remotely controls volume and music on your system across different devices, including your TV, Soundbar, Home Entertainment System and Blu-ray Disc Player. Enjoy the audio you want, where you want.

HDMI

HDMI transmits video and audio signals simultaneously, and provides a clearer picture.
The unit is also equipped with the ARC function which lets you listen to sound from your TV through the Soundbar via an HDMI cable. This function is only available if you connect the unit to an ARC compliant TV.

USB Host Support

You can connect and play music files from external USB storage devices such as MP3 players, USB flash memory, etc. using the Soundbar's USB HOST function.

Bluetooth Function

You can connect a Bluetooth device to the Soundbar and enjoy music with high quality stereo sound, all without wires!

LICENCES

DOLBY DIGITAL

Manufactured under Licence from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

dts 2.0 Channel

For DTS patents, see http://patents.dts.com. Manufactured under licence from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS 2.0 Channel is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.

HDMI

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

HW-J7500_J7501_SQ_ENG_0529.indd 2 2015-05-29 1:57:26

SAFETY INFORMATION

SAFETY WARNINGS

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK).
NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

CAUTION **RISK OF ELECTRIC SHOCK DO NOT OPEN**	This symbol indicates “dangerous voltage” inside the product that presents a risk of electric shock or personal injury.
	This symbol indicates important instructions accompanying the product.

WARNING : To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION : TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

- This apparatus shall always be connected to a AC outlet with a protective grounding connection.
- To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.

CAUTION

- Do not expose this apparatus to dripping or splashing. Do not put objects filled with liquids, such as vases on the apparatus.
- To turn this apparatus off completely, you must pull the power plug out of the wall socket. Consequently, the power plug must be easily and readily accessible at all times.

HW-J7500_J7501_SQ_ENG_0529.indd 3 2015-05-29 1:57:26

PRECAUTIONS

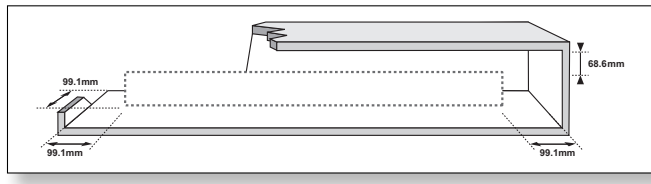

Ensure that the AC power supply in your house complies with the power requirements listed on the identification sticker located on the back of your product. Install your product horizontally, on a suitable base (furniture), with enough space around it for ventilation (7~10 cm). Make sure the ventilation slots are not covered. Do not place the unit on amplifiers or other equipment which may become hot. This unit is designed for continuous use. To fully turn off the unit, disconnect the AC plug from the wall outlet. Unplug the unit if you intend to leave it unused for a long period of time.

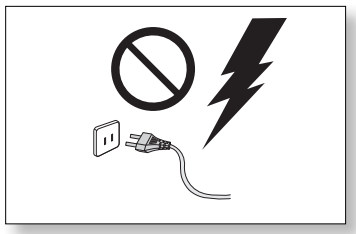

During thunderstorms, disconnect the AC plug from the wall outlet. Voltage peaks due to lightning could damage the unit.

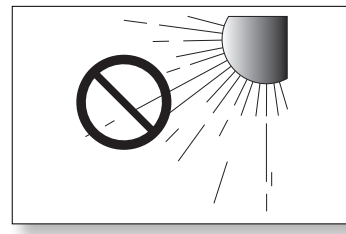

Do not expose the unit to direct sunlight or other heat sources. This could lead to overheating and cause the unit to malfunction.

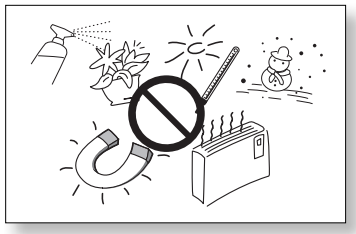

Protect the product from moisture (i.e. vases), and excess heat (e.g. a fireplace) or equipment creating strong magnetic or electric fields. Disconnect the power cable from the AC supply if the unit malfunctions. Your product is not intended for industrial use. It is for personal use only. Condensation may occur if your product has been stored in cold temperatures. If transporting the unit during the winter, wait approximately 2 hours until the unit has reached room temperature before using.

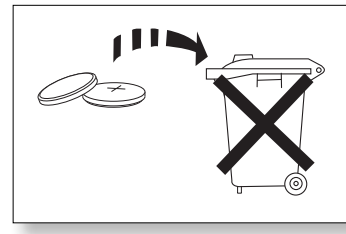

The batteries used with this product contain chemicals that are harmful to the environment. Do not dispose of batteries in the general household trash. Do not dispose of batteries in a fire. Do not short circuit, disassemble, or overheat the batteries. There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type.

WARNING, DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD, The remote control supplied with this product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

HW-J7500_J7501_SQ_ENG_0529.indd 4 2015-05-29 1:57:26

ENG

CONTENTS

2 GETTING STARTED

2 Features

3 Safety Information

6 What's Included

7 DESCRIPTIONS

7 Top / Front Panel

8 Rear / Bottom Panel

9 Remote Control

11 INSTALLATION

11 Installing Soundbar

11 Installing both Soundbar and TV to the Wall Mount Type

14 Installing Soundbar to TV Stand

15 Installing Soundbar to Free-Standing

16 Assembling the Clamp-Wire

16 Mounting the Cover-Foot onto Subwoofer

17 CONNECTIONS

17 Connecting the Subwoofer

18 Connecting to a TV

18 Connections with TV Using HDMI (Digital) Cable

19 Connections with TV Using Optical (Digital) Cable

20 TV SoundConnect

21 Connections with External Device

21 HDMI Cable

21 Optical or AUX Cable

22 USB

24 FUNCTIONS

24 Input Mode

25 Bluetooth

27 Using the Network Standby On Function

27 Using the Multiroom Link

29 Software Update

31 TROUBLESHOOTING

31 Troubleshooting

32 APPENDIX

32 Specifications

Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance.

HW-J7500_J7501_SQ_ENG_0529.indd 5 2015-05-29 1:57:27

WHAT'S INCLUDED

BEFORE READING THE USER'S MANUAL

Note the following terms before reading the user manual.

► Icons used in this manual

Icon	Term	Definition
	Caution	Indicates a situation where a function does not operate or settings may be cancelled.
	Note	Indicates tips or instructions on the page that help you operate a function.

Check for the supplied accessories shown below.

Main Unit

Remote Control / Lithium Battery (3V : CR2032)

Power Cord

DC Adapter



HDMI Cable

USB Cable

USB Converter



Clamp-Wire



User Manual



Holder-Mount

TV-Mount

Holder-Screw 1 : 4EA

Holder-Screw 2 : 10EA

Holder-Fix Mount

Holder-Foot : 3EA

Subwoofer

Power Cord

Cover-Foot : 4EA

Screw-Taptite : 4EA

Foot Rubber : 4EA

- The appearance of the accessories may differ slightly from the illustrations above.
- Use the dedicated USB cable to connect external USB devices to the unit.

HW-J7500_J7501_SQ_ENG_0529.indd 6 2015-05-29 1:57:27

TOP / FRONT PANEL

(Power) Button

Turns the power on and off.

VOL. - / +

Controls the volume level.
The numeric value of the volume level appears in the front panel display.

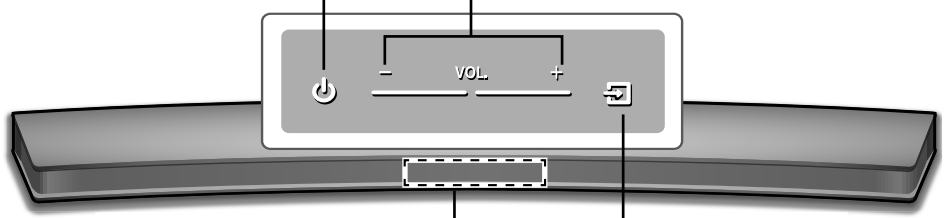

Display

Displays the current mode.

(Source) Button

Selects the D.IN, AUX, HDMI, BT, TV, or USB input.

- While the unit is powered on, pressing the (Source) button for more than 3 seconds sets the button to act as the (Mute) button. To cancel the (Mute) button setup, press the (Source) button for more than 3 seconds again.

- To clean this apparatus, unplug the power cord from the wall outlet and wipe the product using a soft, dry cloth. Due to aluminum being a positive electrostatic material, static discharge may occur.

- When you plug in the AC cord, the power key will work in 4 to 6 seconds.
- When you turn on this unit, there will be a 4 to 5 second delay before it produces sound.
- If you want to enjoy the sound only from the Soundbar, you must turn off the TV's speakers in the Audio Setup menu of your TV. Refer to the owner's manual supplied with your TV.

HW-J7500_J7501_SQ_ENG_0529.indd 7 2015-05-29 1:57:30

REAR / BOTTOM PANEL

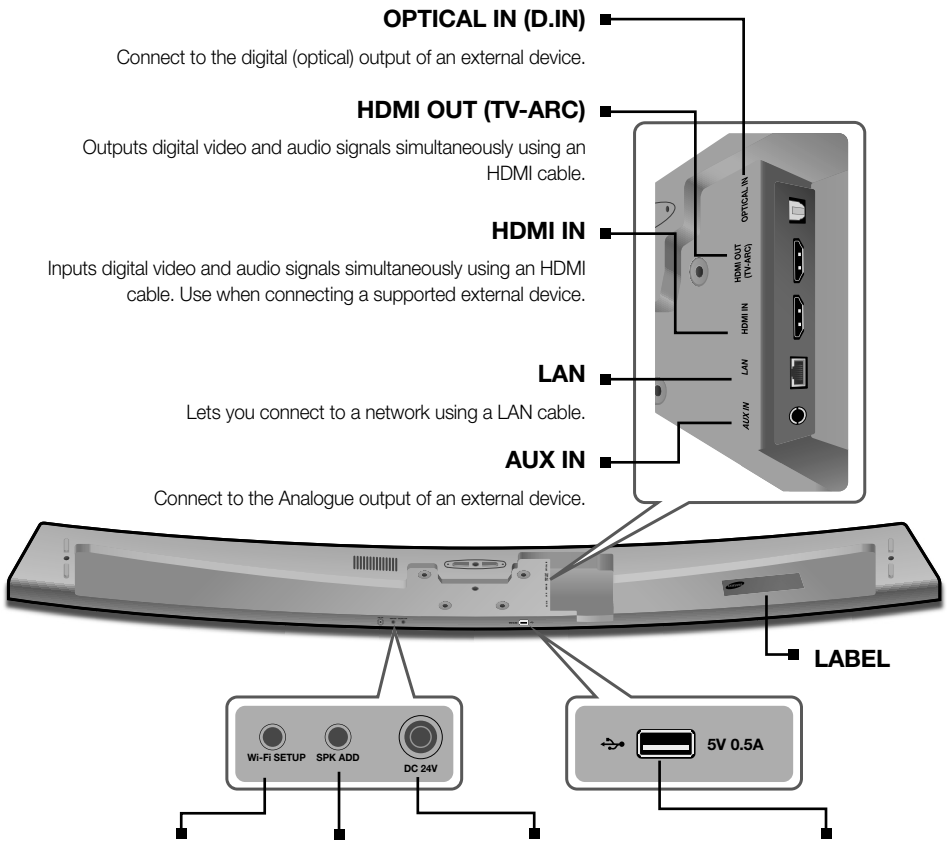
OPTICAL IN (D.IN)
Connect to the digital (optical) output of an external device.
HDMI OUT (TV-ARC)
Outputs digital video and audio signals simultaneously using an HDMI cable.
HDMI IN
Inputs digital video and audio signals simultaneously using an HDMI cable. Use when connecting a supported external device.
LAN
Lets you connect to a network using a LAN cable.
AUX IN
Connect to the Analogue output of an external device.
OPTICAL IN
HDMI OUT (TV-ARC)
HDMI IN
LAN
AUX IN
LABEL
Wi-Fi SETUP
SPK ADD
DC 24V
5V 0.5A
Wi-Fi SETUP
Press this button to connect your Soundbar to your network using Wi-Fi setup.
SPK ADD
Press the button to connect Soundbar to the HUB. (not supplied)
DC 24V (Power Supply In)
Connect the DC power adaptor to the power supply jack, and then connect the AC power adaptor plug to a wall outlet.
(USB Port)
Connect USB devices here to play files on the devices.

- When disconnecting the power cable of the AC power adaptor from a wall outlet, pull the plug. Do not pull the cable.
- Do not connect this unit or other components to an AC outlet until all connections between components are complete.

HW-J7500_J7501_SQ_ENG_0529.indd 8 2015-05-29 1:57:33

REMOTE CONTROL

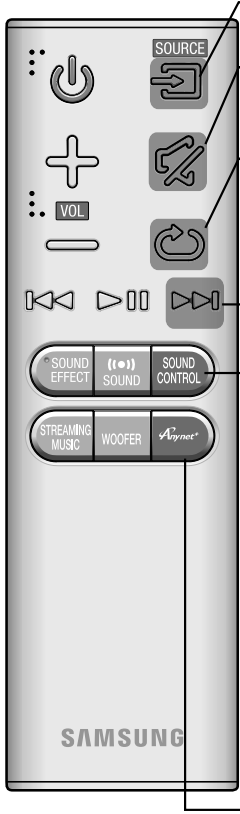

SOURCE

Press to select a source connected to the Soundbar.

Mute

You can turn the volume down to 0 with the push of a button.
Press again to restore the sound to the previous volume level.

Repeat

Press to set the Repeat function during music playback from a USB device.

OFF - REPEAT : Cancells Repeat Playback.

TRACK - REPEAT : Repeatedly play a track.

ALL - REPEAT : Repeatedly play all tracks.

RANDOM - REPEAT : Plays tracks in random order.
(A track that has already been played may be played again.)

Skip Forward

If there is more than one file on the device you are playing, and you press the ▶▶| button, the next file is selected.

SOUND CONTROL (*Use the |◀◀, ▶▶| buttons to adjust level.)

Press to select **TREBLE**, **BASS**, or **AUDIO SYNC**. Then, use the |◀◀, ▶▶| buttons to adjust the Treble, Bass volume from -3 to +3.

Press and hold the **SOUND CONTROL** button for about 5 seconds to adjust the sound for each frequency band. 150Hz, 300Hz, 600Hz, 1.2KHz, 2.5KHz, 5KHz, and 10KHz are selectable and each can be adjusted to a setting between -6 and +6.

If the Soundbar is connected to a digital TV and the video appears out of sync with the audio, press the **SOUND CONTROL** button to sync the audio with the video. Use the |◀◀, ▶▶| buttons to set the audio delay between 0 ms and 300 ms. In USB mode, TV mode, and BT mode, the Audio Sync function may not available.

Anynet+

Press the **Anynet+** button to turn the Anynet+ function on or off.
(Default : Auto Power Link OFF, **ON - ANYNET+** / **OFF - POWER LINK** or **OFF - ANYNET+** / **ON - POWER LINK**). The Anynet+ function lets you control the Soundbar with the remote from an Anynet+ compatible Samsung TV. The Soundbar must be connected to the TV via an HDMI cable.

* Auto Power Link
Synchronizes the Soundbar to a connected Optical source via the Optical jack so it turns on automatically when you turn on your TV. (See page 19)

You can also activate **Wi-Fi SETUP** function by pressing and holding **Anynet+** button on the remote for over 7 seconds.

- Soundbar is a Samsung proprietary name.
- Operate the TV using the TV's remote control.

HW-J7500_J7501_SQ_ENG_0529.indd 9 2015-05-29 1:57:35

Power

Turns the Soundbar on and off.

Volume

Adjusts the volume level of the unit.

Play / Pause

Press the ▶II button to pause the playing of a file temporarily.
Press the ▶II button again to play the selected file.

Skip Back

If there is more than one file on the device you are playing, and you press the I◀◀ button, the previous file is selected.

SOUND EFFECT

You can select the sound modes - **STANDARD (Original Sound)**, **MUSIC**, **CLEAR VOICE**, **SPORTS**, **MOVIE**, and **NIGHT MODE** - depending on the content you want to listen to.

Select the **STANDARD** mode if you want to enjoy the original sound.

((●)) SOUND

Surr.Sound adds depth and spaciousness to the sound. Pressing the **((●)) SOUND** button repeatedly cycles through the Surr.Sound settings : **ON - SURROUND SOUND**, **OFF - SURROUND SOUND**

STREAMING MUSIC

Press **STREAMING MUSIC** button to listen to an Internet radio station. Each time you press this button, the Soundbar switches to the next default station, cycling through the 3 default stations.

To use the **STREAMING MUSIC** function, the soundbar must be connected to the network. (See page 27)

DRC (Dynamic Range Control) *

Lets you apply dynamic range control to Dolby Digital.

Press and hold the **STREAMING MUSIC** button, then the DRC (Dynamic Range Control) function toggles between **ON** and **OFF**.

WOOFER (* Use the I◀◀,▶▶I buttons to adjust woofer volume.)

Press the **WOOFER** button. Then, use the I◀◀,▶▶I buttons to adjust Subwoofer volume from -12, -6 to +6.

You can also activate **SPK ADD** function of the soundbar by pressing and holding **WOOFER** button of the remote for over 5 seconds.

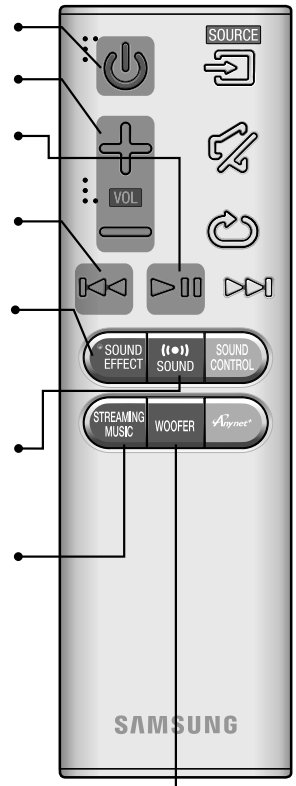

INSTALLING THE BATTERY IN THE REMOTE CONTROL

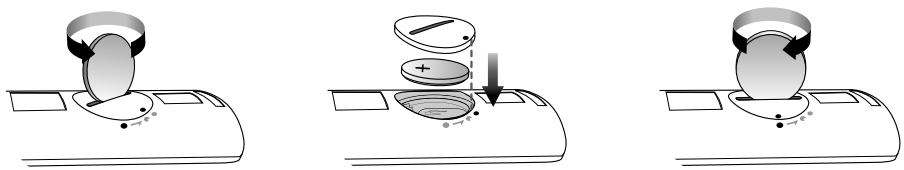

1. Use a suitable coin to turn the remote control's battery cover counterclockwise to remove it as shown in the figure above.
2. Insert a 3V lithium battery. Keep the positive (+) pole facing up when inserting the battery. Put the battery cover on and align the '●' marks side by side as shown in the figure above.
3. Use a suitable coin to turn the remote control battery cover clockwise as far as it will go to fix it in place.

HW-J7500_J7501_SQ_ENG_0529.indd 10 2015-05-29 1:57:36

INSTALLING SOUNDBAR

INSTALLING BOTH SOUNDBAR AND TV TO THE WALL MOUNT TYPE

- This model corresponds to the 2015 Samsung curved TV S8500/S9000 - 55"/65", S9500 - 65". Please refer to the home page of Samsung Electronics to see the detail list of corresponding models.
- When mounting the Soundbar to a JS9500 series TV, use the 1.6” Cover-Distance which is included in the Samsung Mini Wall Mount set.
- To mount both of a soundbar and the TV using the wall mount, make sure to mount the soundbar onto the TV first, then mount the TV.
- To mount the TV on the wall, refer to the user’s manual enclosed with the TV you purchased.
- This Soundbar cannot be installed to a non-compatible TV, in either form of TV mount or TV stand.

Check for the supplied accessories shown below.

Holder-Screw 1 : 4EA

Holder-Screw 2 : 10EA

TV-Mount

Holder-Fix Mount



Used for S9500, 65” TV model

Holder-Mount

1. Place the Soundbar as shown in the illustration, ensuring that none of the buttons touch the surface it is lying on.

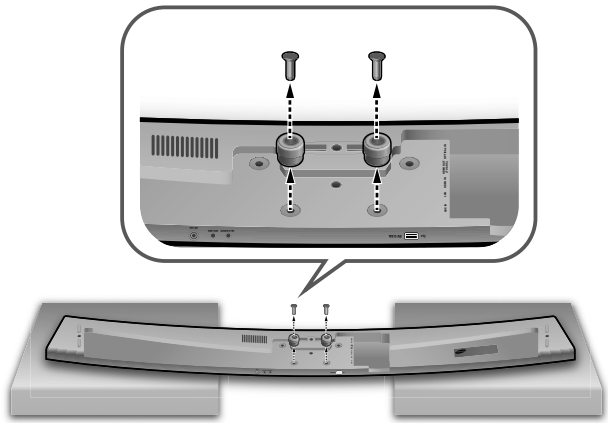

2. Remove **Holder-Support** (2EA) from the Soundbar as shown in the illustration.

HW-J7500_J7501_SQ_ENG_0529.indd 11 2015-05-29 1:57:37

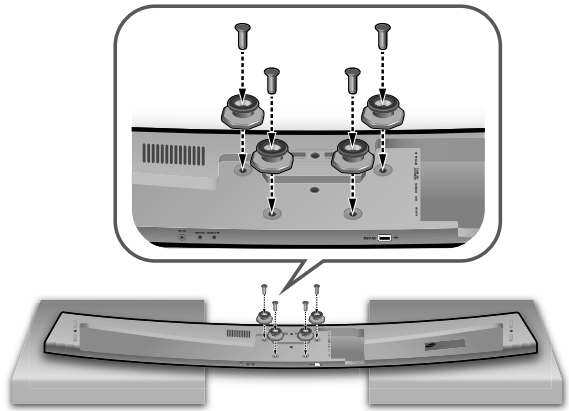

3. Fasten the four **Holder-Screws 1** and four of the **Holder-Screws 2** to the four holes in the Soundbar, as shown in the illustration.

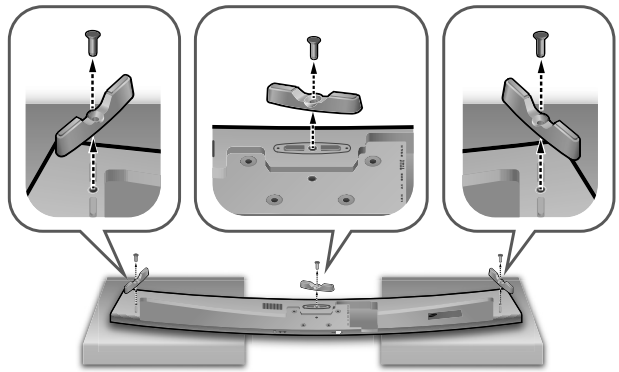

4. If the **Holder-Foot** is attached, remove it first to install the TV-Mount.

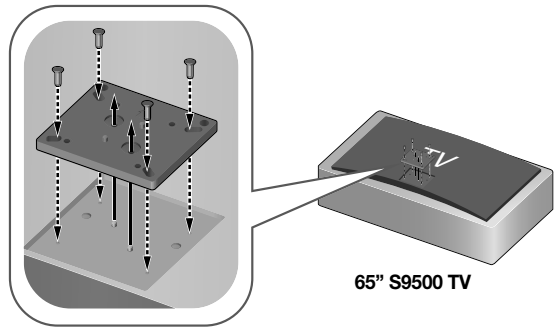

5. (When mounting to a S9500, 65” TV model. For other models, skip this step.)
Seat the **Holder-Mount** onto the TV using the TV’s guide, fix it by fastening **Holder-Screw 2** (4EA).
Carefully align the **Holder-Mount**’s hole centred on the TV, not to place it one-sided.

HW-J7500_J7501_SQ_ENG_0529.indd 12 2015-05-29 1:57:39

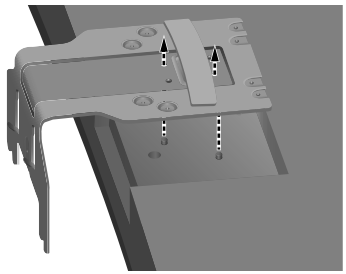

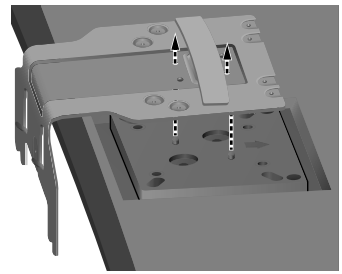

65” S9500 TV

6. If you mount the Soundbar on a matched Samsung TV, use the Guide on TV to put the **TV-Mount** on TV securely.

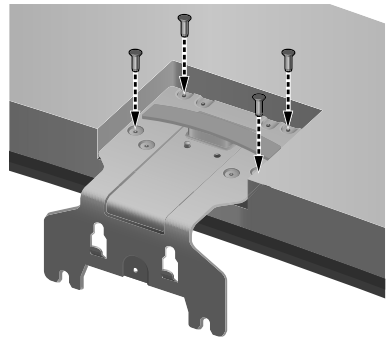

7. Fasten the **TV-Mount** to the TV using the remaining 4 **Holder-Screws 2**.

8. After attaching the **TV-Mount**, mount the TV on the wall.

Soundbar base

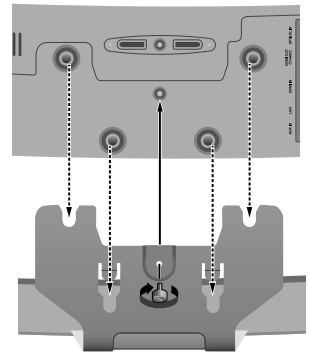

TV base, with **TV-Mount** attached

9. Push the Soundbar onto the **TV-Mount** as far as it will go, as shown in the illustration.

10. Fasten the **Holder-Fix Mount** to the Soundbar to fix the Soundbar to the **TV-Mount**.

HW-J7500_J7501_SQ_ENG_0529.indd 13 2015-05-29 1:57:43

INSTALLING SOUNDBAR TO TV STAND

You can install Soundbar to TV stand if you have Soundbar matching TV with this model.

Check for the supplied accessories shown below.

Holder-Foot : 3EA	Holder-Screw 2 : 3EA

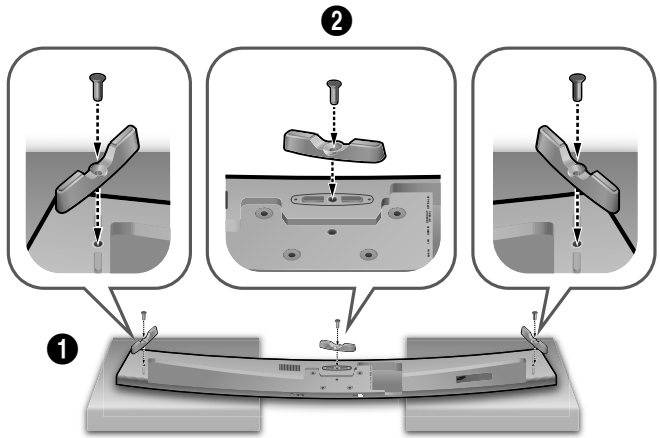

1. Place the Soundbar as shown in the illustration, ensuring that none of the buttons touch the surface it is lying on.
2. Fix **Holder-Foot** (3EA) and **Holder-Screw 2** (3EA) to the Soundbar as shown in the illustration.

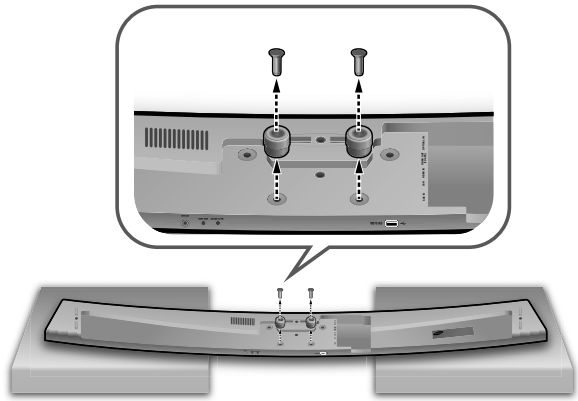

3. Remove **Holder-Support** (2EA) from the Soundbar as shown in the illustration.

HW-J7500_J7501_SQ_ENG_0529.indd 14 2015-05-29 1:57:45

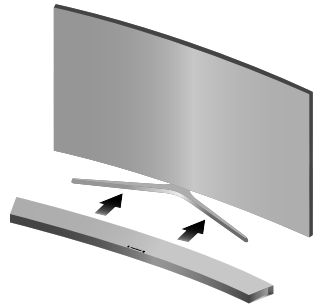

4. Align the Soundbar's centre with the centre of the base of the TV, and then carefully push it onto the stand as far as it will go, as shown in the illustration. Be careful not to unbalance the TV.



- Do not place a heavy thing or step on the main unit.

INSTALLING SOUNDBAR TO FREE-STANDING

1. Centre the Soundbar on the flat area in front of the TV.

HW-J7500_J7501_SQ_ENG_0529.indd 15 2015-05-29 1:57:48

ASSEMBLING THE CLAMP-WIRE

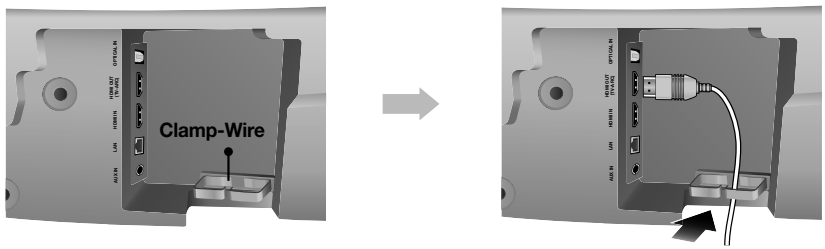

Attach the clamp-wire to the unit as shown, and then run the cables through the clamp-wire to keep them neat.

MOUNTING THE COVER-FOOT ONTO SUBWOOFER

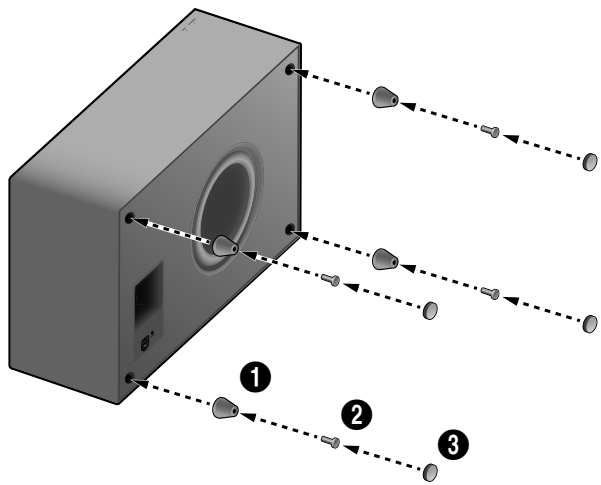

1. Place each **Cover-Foot** on the 4 holes correspondingly as shown in the illustration.
2. Insert **Screw-Taptite** (4EA) into corresponding hole of **Cover-Foot**.
3. Block up the holes with **Foot Rubber** (4EA) to complete.

HW-J7500_J7501_SQ_ENG_0529.indd 16 2015-05-29 1:57:48

- Do not connect the power cord of this product or your TV to a wall outlet until all connections between components are complete.
- Before moving or installing this product, be sure to turn off the power and disconnect the power cord.

CONNECTING THE SUBWOOFER

CONNECTING TO THE SUBWOOFER AUTOMATICALLY

The main unit and subwoofer should link (connect wirelessly) automatically when the main unit and subwoofer are turned on.

- If it is completely connected, the blue LED in the subwoofer stops blinking.

CONNECTING TO THE SUBWOOFER MANUALLY

The Subwoofer's linking ID is preset at the factory and the main unit and subwoofer should link (connect wirelessly) automatically when the main unit and subwoofer are turned on. If the Link indicator does not light when the main unit and subwoofer are turned on, please set the ID by following the procedure below.

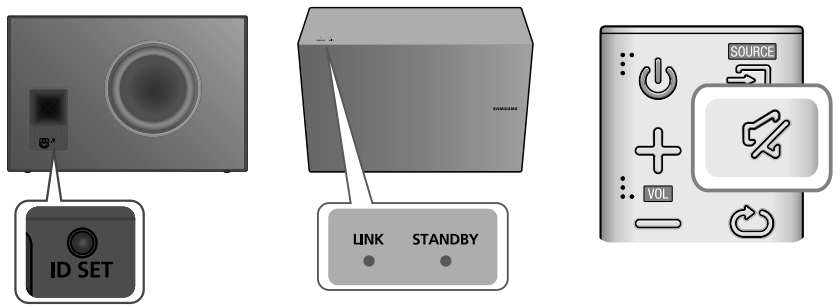

1. Plug the power cords of the main unit and subwoofer into an AC wall outlet.
2. Press the **ID SET** button on the back of the subwoofer with a small, pointed object for 5 seconds.
   - The STANDBY indicator is turned off and the LINK indicator (Blue LED) blinks quickly.
3. While the main unit is powered off (in STANDBY mode), press and hold the (Mute) on the remote control for 5 seconds.
4. The **ID SET** message appears on the Soundbar's display.
5. To finalise the link, turn the main unit's power on while the subwoofer's Blue LED blinks.
   - The main unit and the subwoofer should now be linked (connected).
   - The Link indicator (Blue LED) on the subwoofer should be on.
   - If the Link indicator is not solid blue, the linking process has failed. Turn off the main unit and start again from Step 2.
   - You can enjoy better sound from the wireless subwoofer by selecting a Sound Effect. (See page 10)

HW-J7500_J7501_SQ_ENG_0529.indd 17 2015-05-29 1:57:49

- Before moving or installing the product, be sure to turn off the power and disconnect the power cord.
- If the main unit is powered off, the wireless subwoofer will be in standby mode and the STANDBY LED on the upper side will come on after the Link indicator (Blue LED) blinks for 30 seconds.
- If you use a device that uses the same frequency (2.4GHz) as the Soundbar near the Soundbar, interference may cause some sound interruption.
- The transmission distance of the wireless signal between the main unit and subwoofer is about 10 meters, but may vary depending on your operating environment. If a steel-concrete or metallic wall is between the main unit and the wireless subwoofer, the system may not operate at all, because the wireless signal cannot penetrate metal.
- If the main unit doesn't make a wireless connection, follow steps 1-5 on the previous page to re-set the connection between the main unit and wireless subwoofer.

- The wireless receiving antenna is built into the wireless subwoofer. Keep the unit away from water and moisture.
- For optimal listening performance, make sure that the area around the wireless subwoofer location is clear of any obstructions.

CONNECTING TO A TV

CONNECTIONS WITH TV USING HDMI (DIGITAL) CABLE

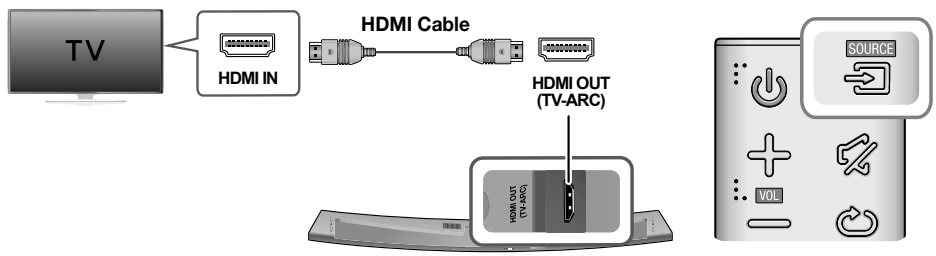

1. Connect an HDMI cable from the **HDMI OUT (TV-ARC)** jack on the back of the product to the HDMI IN jack on your TV.
2. Press the (Source) button on the top panel of Soundbar or the **SOURCE** button on remote control to select the **D.IN** mode.

- HDMI is an interface that enables the digital transmission of video and audio data with just a single connector.
- If the TV provides an ARC port, connect the HDMI cable to the HDMI IN (ARC) port.
- We recommend you use a coreless HDMI cable if possible. If you use a cored HDMI cable, use one whose diameter is less than 14 mm.
- Anynet+ must be turned on.
- This function is not available if the HDMI cable does not support ARC.

HW-J7500_J7501_SQ_ENG_0529.indd 18 2015-05-29 1:57:50

CONNECTIONS WITH TV USING OPTICAL (DIGITAL) CABLE

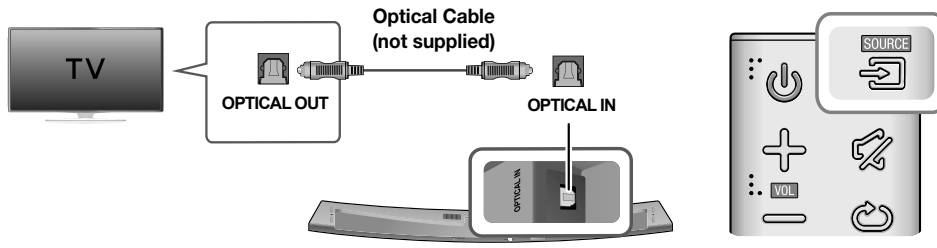

1. Connect **OPTICAL IN** (Audio) on the Soundbar to the OPTICAL OUT jack of the TV.
2. Press the (Source) button on the top panel of Soundbar or the **SOURCE** button on remote control to select the **D.IN** mode.

► Auto Power Link

If you have connected the main unit to a TV with a digital optical cable, set the Auto Power function ON to have the Soundbar turn on automatically when you turn the TV on.

AUTO POWER LINK	Display
ON	**OFF - ANYNET+ / ON - POWER LINK**
OFF	**ON - ANYNET+ / OFF - POWER LINK**

1. Connect the Soundbar and a TV with an Optical cable. (not supplied)
2. Press the (Source) button on the main unit's top panel or the **SOURCE** button on the remote control to select the **D.IN** mode.
3. Press the **Anynet+** button on the remote control to toggle the Auto Power Link function on and off.

- Depending on the connected device, Auto Power Link may not function.

HW-J7500_J7501_SQ_ENG_0529.indd 19 2015-05-29 1:57:52

TV SOUNDCONNECT

You can enjoy TV sound through your Soundbar when it is connected to a Samsung TV that supports the TV SoundConnect function.

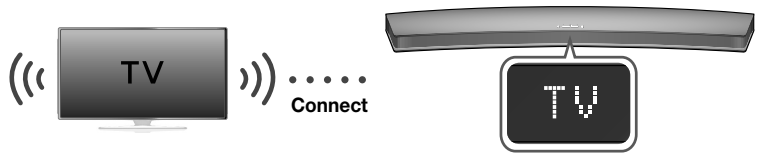

1. Turn on the TV and Soundbar.
   - Turn on the menu of the TV.
   - Move to Speaker Settings on "Sound" tab.
   - Set the "Add New Device" menu to "On".
2. Press the (Source) button on the main unit's top panel or the **SOURCE** button on the remote control to select the **TV** mode.
3. On the TV, a message asking whether to enable the TV SoundConnect function appears.
4. Select **<Yes>** to finish connecting the TV and Soundbar using the TV's remote control.

- Switching the Soundbar's mode from TV to another mode automatically terminates TV SoundConnect.
- To connect the Soundbar to another TV, the existing connection must be terminated.
- Terminate the connection to the existing TV, and then press the ▶II button on the remote control for 5 seconds to connect to another TV.

- The TV SoundConnect (SoundShare) function is supported by some Samsung TVs released from 2012 on. Check whether your TV supports the TV SoundConnect (SoundShare) function before you begin. (For further information, refer to the TV's user manual.).
- If your Samsung TV was released before 2014, check the SoundShare setting menu.
- If the distance between the TV and Soundbar exceeds 10 meters, the connection may not be stable or the audio may stutter. If this occurs, relocate the TV or Soundbar so that they are within operational range, and then re-establish the TV SoundConnect connection.
- TV SoundConnect Operational Ranges:
  - Recommended pairing range: within 2 meters.
  - Recommended operational range: within 10 meters.
- The Play/Pause, Next, and Prev buttons on the Soundbar or Soundbar's remote do not control the TV.

HW-J7500_J7501_SQ_ENG_0529.indd 20 2015-05-29 1:57:53

CONNECTIONS WITH EXTERNAL DEVICE

HDMI CABLE

HDMI is the standard digital interface for connecting to TVs, projectors, DVD players, Blu-ray players, set top boxes, and more.
HDMI prevents any degradation to the signal due to conversion to analogue and maintains the video and audio quality of the original digital source.

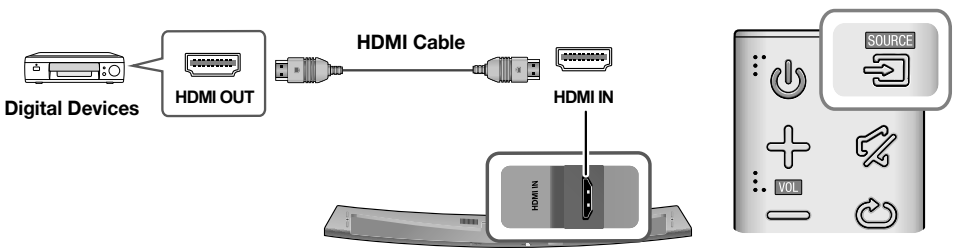

1. Connect an HDMI cable from the **HDMI IN** jack on the back of the product to the HDMI OUT jack on your digital device.
2. Press the (Source) button on the top panel of Soundbar or the **SOURCE** button on remote control to select the **HDMI** mode.

OPTICAL OR AUX CABLE

This unit comes equipped with one optical in digital jack and one audio analogue in jack, giving you two ways to connect it to an External Devices.

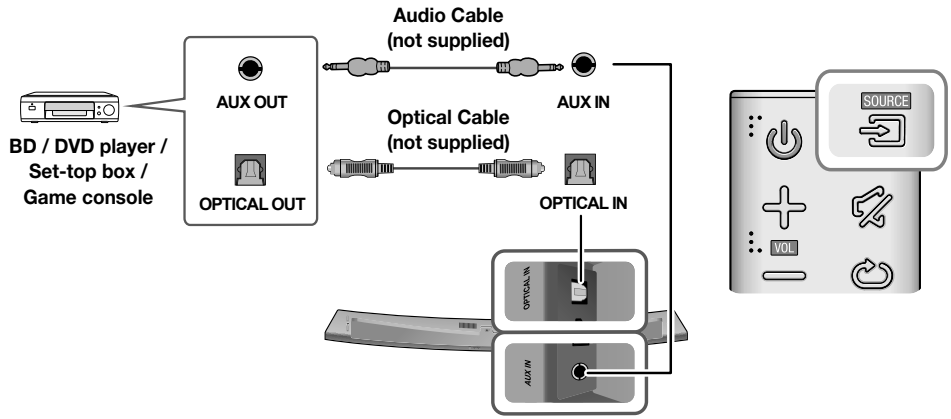

HW-J7500_J7501_SQ_ENG_0529.indd 21 2015-05-29 1:57:53

► AUX Cable

1. Connect **AUX IN** (Audio) on the main unit to the AUDIO OUT jack of the Source Device.
2. Press the (Source) button on the top panel of Soundbar or the **SOURCE** button on remote control to select the **AUX** mode.

► Optical Cable

1. Connect **OPTICAL IN** (Audio) on the main unit to the OPTICAL OUT jack of the Source Device.
2. Press the (Source) button on the top panel of Soundbar or the **SOURCE** button on remote control to select the **D.IN** mode.

USB

You can play music files located on USB storage devices through the Soundbar.

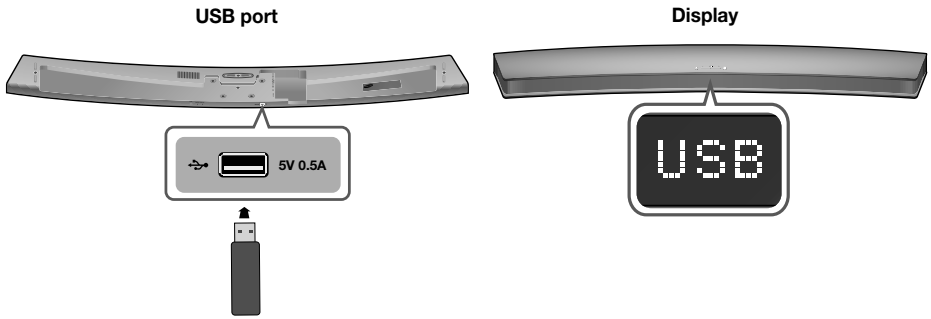

1. Connect the USB device to the USB port on the back of the product.
2. Press the (Source) button on the main unit's top panel or the **SOURCE** button on the remote control to select the **USB** mode.
3. **USB** appears on the display screen.
   - The Soundbar connection to the USB device is complete.
   - The Soundbar automatically turns off (Auto Power Off) if no USB device has been connected for more than 15 minutes.

► Before you connect a USB device

Be aware of the following:

- If the file name of a file on a USB device exceeds 10 characters, it is not displayed on the Soundbar's display.
- This product may not be compatible with certain types of USB storage media.
- The Soundbar supports the FAT16 and FAT32 file systems.
  - The NTFS file system is not supported.
- Connect USB devices directly to the USB port of the product. Otherwise, you may encounter a USB compatibility problem.

HW-J7500_J7501_SQ_ENG_0529.indd 22 2015-05-29 1:57:55

- Do not connect multiple storage devices to the product via a multi-card reader. It may not operate properly.
- Digital camera PTP protocols are not supported.
- Do not remove the USB device while it is transferring files.
- DRM-protected music files (MP3, WMA) from commercial web sites cannot be played.
- External HDDs are not supported.
- Mobile phone devices are not supported.
- File Format Type Compatibility list:

Extension	Codec	Sampling Rate	Bit rate
***.mp3**	MPEG 1 Layer1	32/44.1/48	32 ~ 448kbps
	MPEG 1 Layer2	32/44.1/48	32 ~ 384kbps
	MPEG 1 Layer3	32/44.1/48	32 ~ 320kbps
	MPEG 2 Layer3	16/22.05/24/32/44.1/48	8 ~ 160kbps
	MPEG 2.5 Layer3	8/11.025/12/16/22.05/24/32/44.1/48	8 ~ 160kbps
***.wma**	Wave_Format_MSAudio1	-	-
	Wave_Format_MSAudio2	-	-
	WMA Professional	Not Support	-
***.wav**	-	8 KHz ~ 192KHz	~ 8.8Mbps
***.ogg**	-	8 KHz ~ 48KHz	-
***.flac**	-	8 KHz ~ 192KHz	~ 5.6Mbps
***.m4a**	Alac (Apple lossless Audo codec)	8 KHz ~ 192KHz	~ 1Mbps
***.aif**	Audio Interchange File Format	8 KHz ~ 192KHz	~ 4.4Mbps

- If there are too many folders and files stored in the USB device, reading may take some time.

HW-J7500_J7501_SQ_ENG_0529.indd 23 2015-05-29 1:57:56

INPUT MODE

Press the (Source) button on the main unit's top panel or the **SOURCE** button on the remote control to select the mode you want.

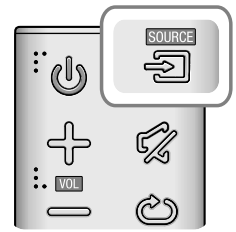

Input mode	Display
Optical Digital input ARC (HDMI OUT) input	**D.IN**
AUX input	**AUX**
HDMI input	**HDMI**
BLUETOOTH mode	**BT**
TV SoundConnect	**TV**
USB mode	**USB**

The unit turns off automatically in the following situations.

- D.IN / HDMI / BT / TV / USB / ARC Mode
  - If there is no audio signal for 15 minutes.
- AUX Mode
  To turn the Auto Power Down function ON or OFF, press and hold the ▶II button for 5 seconds.
  ON - AUTO POWER DOWN / **OFF - AUTO POWER DOWN** appears on the display.
  - If the AUX cable is disconnected for 15 minutes.
  - If there is no KEY input for 8 hours when the AUX cable is connected.

HW-J7500_J7501_SQ_ENG_0529.indd 24 2015-05-29 1:57:56

BLUETOOTH

You can connect a Bluetooth device to the Soundbar and enjoy music with high quality stereo sound, all without wires!

TO CONNECT THE SOUNDBAR TO A BLUETOOTH DEVICE

Check if the Bluetooth device supports the Bluetooth compliant stereo headset function.

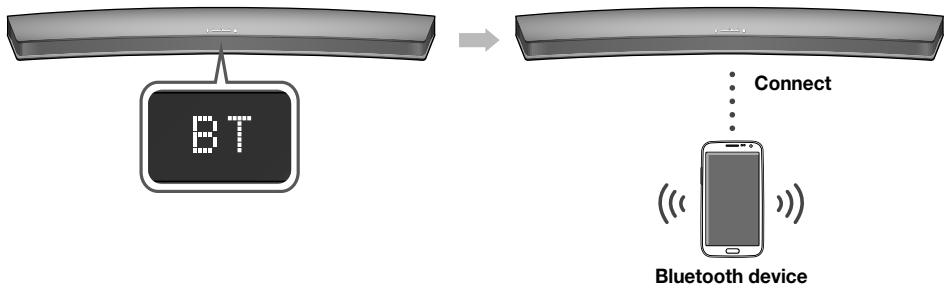

1. Press the (Source) button on the main unit's top panel or the **SOURCE** button on the remote control to select the **BT** mode.
   - You will see **BT READY** on the front display of the Soundbar.
2. Select the Bluetooth menu on the Bluetooth device you want to connect. (Refer to the Bluetooth device's user manual.)
3. Select **"[Samsung] HW-Jxxxx"** from the list.
   - When the Soundbar is connected to the Bluetooth device, it will display [**Bluetooth device name**] → **BT** on the front display.
   - The device name can only be displayed in English. An underline " _ " will be displayed if the name is not in English.
   - If the Bluetooth device has failed to pair with the Soundbar, delete the previous "**[Samsung] HW-Jxxxx**" found by the Bluetooth device and have it search for the Soundbar again.
4. Play music on the connected device.
   - You can listen to the music playing on the connected Bluetooth device over the Soundbar.
   - In **BT** mode, the Play / Pause / Next / Prev functions are not available. However, these functions are available in Bluetooth devices supporting AVRCP.

- If asked for PIN code when connecting a Bluetooth device, enter <0000>.
- Only one Bluetooth device can be paired at a time.
- The Bluetooth connection will be terminated when you turn the Soundbar off.
- The Soundbar may not perform Bluetooth search or connection correctly under the following circumstances:
  - If there is a strong electrical field around the Soundbar.
  - If several Bluetooth devices are simultaneously paired with the Soundbar.
  - If the Bluetooth device is turned off, not in place, or malfunctions.
  - Note that such devices as microwave ovens, wireless LAN adaptors, fluorescent lights, and gas stoves use the same frequency range as the Bluetooth device, which can cause electric interference.

HW-J7500_J7501_SQ_ENG_0529.indd 25 2015-05-29 1:57:57

- The Soundbar supports SBC data (44.1kHz, 48kHz).
- Connect only to a Bluetooth device that supports the A2DP (AV) function.
- You cannot connect the Soundbar to a Bluetooth device that supports only the HF (Hands Free) function.
- Once you have paired the Soundbar to a Bluetooth device, selecting "**[Samsung] HW-Jxxxx**" from the device's scanned devices list will automatically change the Soundbar to **BT** mode.
- Available only if the Soundbar is listed among the Bluetooth device's paired devices. (The Bluetooth device and the Soundbar must have been previously paired at least once.)
- Soundbar will appear in the Bluetooth device's searched devices list only when the Soundbar is displaying **BT READY**.
- In the TV SoundConnect mode, the Soundbar cannot be paired to another Bluetooth device.

TO DISCONNECT THE BLUETOOTH DEVICE FROM THE SOUNDBAR

You can disconnect the Bluetooth device from the Soundbar. For instructions, see the Bluetooth device's user manual.

- The Soundbar will be disconnected.
- When the Soundbar is disconnected from the Bluetooth device, the Soundbar will display **BT DISCONNECTED** on the front display.

TO DISCONNECT THE SOUNDBAR FROM THE BLUETOOTH DEVICE

Press the **SOURCE** button on the remote control or the (Source) button on the product's top panel to switch from **BT** to another mode or turn off the Soundbar.

- The connected Bluetooth device will wait a certain amount of time for a response from the Soundbar before terminating the connection. (Disconnection time may differ, depending on the Bluetooth device)

- In Bluetooth connection mode, the Bluetooth connection will be lost if the distance between the Soundbar and the Bluetooth device exceeds 10 meters.
- The Soundbar automatically turns off after 15 minutes in the Ready state.

► More About Bluetooth

Bluetooth is a technology that enables Bluetooth-compliant devices to interconnect easily with each other using a short wireless connection.

- A Bluetooth device may cause noise or malfunction, depending on usage, when:
  - A part of your body is in contact with the receiving/transmitting system of the Bluetooth device or the Soundbar.
  - It is subject to electrical variation from obstructions caused by a wall, corner, or office partition.
  - It is exposed to electrical interference from same frequency-band devices including medical equipment, microwave ovens, and wireless LANs.
- Pair the Soundbar with the Bluetooth device while they are close together.
- The further the distance between the Soundbar and Bluetooth device, the worse the quality is. If the distance exceeds the Bluetooth operational range, the connection is lost.
- In poor reception areas, the Bluetooth connection may not work properly.
- The Bluetooth connection only works when it is close to the unit. The connection will be automatically cut off if the Bluetooth device is out of range. Even within range, the sound quality may be degraded by obstacles such as walls or doors.

HW-J7500_J7501_SQ_ENG_0529.indd 26 2015-05-29 1:57:58

USING THE NETWORK STANDBY ON FUNCTION

The Network Standby On function becomes available if wireless connection was properly established between the smart device and Soundbar. This function turns on the Soundbar automatically when a smart device attempts to connect to the Soundbar via Bluetooth or Wi-Fi. If the Soundbar was turned on via Bluetooth connection, its input mode is set to **BT** automatically. Turning on the Soundbar via Wi-Fi is available only by using the App. For further information, refer to the Web manual.

1. Connect the Smart device to your Soundbar.
2. Turn the Network Standby On function on by pressing the ⏭ button on the Soundbar remote for more than 5 seconds. You can turn the function off by pressing the ⏭ button again for more than 5 seconds.

- Available only if the Soundbar is listed among the Smart device's paired devices. (The Smart device and the Soundbar must have been previously paired at least once.)
- Soundbar will appear in the Smart device's searched devices list only when the Soundbar is displaying [BT READY] or [WiFi READY].
- In the TV SoundConnect mode, the Soundbar cannot be paired to another Smart device.
- If Network Standby On function did not work
  - The Network Standby On is set to Off.
- Wi-Fi connection to the Soundbar will be terminated if its power cord was disconnected or the power was cut off. Turn on the Soundbar and reconnect.

USING THE MULTIROOM LINK

Once the Soundbar is connected to a smart device with Multiroom App, you can connect multiple Samsung Multiroom devices together wirelessly.

BEFORE YOU BEGIN

► Communication Basics

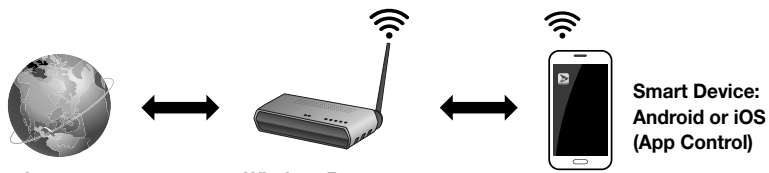

1. Requirements: Wireless Router, Smart Device
2. The wireless router should be connected to the Internet.
3. The smart device should be connected to the router via a Wi-Fi connection.

HW-J7500_J7501_SQ_ENG_0529.indd 27 2015-05-29 1:57:58

INSTALLING THE SAMSUNG MULTIROOM APP

To use the Soundbar, you must download and then install the Samsung Multiroom App by accessing the app through Google play or the App Store. With the Samsung Multiroom App installed, you can play music stored in your smart device, from connected devices and other content providers, and from Internet radio stations.

► Android or iOS

Download the Samsung Multiroom app from Google Play or the App Store of your smart device.

* Market search : Samsung Multiroom

or

► Accessing the Samsung Multiroom App

To access the Samsung Multiroom app, press the Multiroom app icon on your smart device.

CONNECTING THE SOUNDBAR TO YOUR NETWORK

On your Smart device, select the Samsung Multiroom app.

Follow the directions on your smart device's screen.

- For further information, refer to the Web Manual.
  - Web manual : www.Samsung.com → Support → Product name search → HW-J7500 or HW-J7501 PDF file download.
- When connected to a wired network, try to use the CAT 7 cable to connect.

HW-J7500_J7501_SQ_ENG_0529.indd 28 2015-05-29 1:57:59

SOFTWARE UPDATE

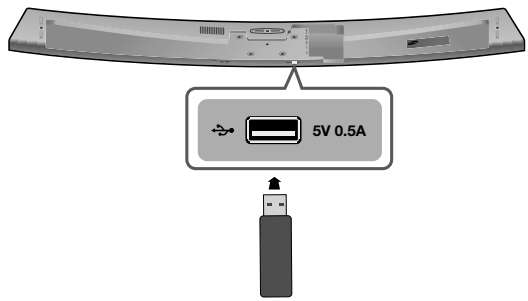

UPDATING WITH USB

Samsung may offer updates for the Soundbar's system firmware in the future.

If an update is offered, you can update the firmware by connecting a USB device with the firmware update stored on it to the USB port on your Soundbar.

Note that if there are multiple update files, you must load them onto the USB device singly and use them to update the firmware one file at a time.

Please visit samsung.com or contact the Samsung call centre to receive more information about downloading updates files.

1. While the Soundbar is turned off, connect the USB storage device that contains the updating firmware to the Soundbar's USB port.
2. Disconnect the power cord, reconnect it and turn it on.
3. Turn on the Soundbar **UPDATE** appears on the display and updating begins within 3 minutes.
   - Upon completion of updating, the Soundbar turns off and on automatically.

► If UPDATE was not displayed

1. Turn off the Soundbar, connect the USB storage device that contains update files to the Soundbar's USB port.
2. Disconnect the power cord, reconnect it and turn it on.

- Insert a USB device containing the firmware update into the USB port on the main unit.
- Updating firmware may not work properly if audio files supported by the Soundbar are stored in the USB storage device.
- Do not disconnect the power or remove the USB device while updates are being applied. The main unit will turn off automatically after completing the firmware update.

HW-J7500_J7501_SQ_ENG_0529.indd 29 2015-05-29 1:57:59

- After the update, all settings are reset to their factory default settings. We recommend you write down your settings so that you can easily reset them after the update. Note that updating firmware resets the subwoofer connection too.
  If connection to the subwoofer is not re-established automatically after the update, refer to page 17.
  If the firmware fails to update, we recommend formatting the USB device in FAT16 and trying again.
- Do not format the USB device in the NTFS format. The Soundbar does not support the NTFS file system.
- Depending on the manufacturer, some USB devices may not be supported.

AUTO UPDATE

Even when the Soundbar is turned off, the Soundbar will automatically check latest software version and continue to update if it was connected to the Internet.

- The Soundbar is configured to run auto update by default.
- To use auto update function, the Soundbar must be connected to the Internet.
- Wi-Fi connection to the Soundbar will be terminated if its power cord was disconnected or the power was cut off. Turn on the Soundbar and reconnect.

HW-J7500_J7501_SQ_ENG_0529.indd 30 2015-05-29 1:57:59

TROUBLESHOOTING

Before requesting service, please check the following.

The unit will not turn on.	
• Is the power cord plugged into the outlet?	→ Connect the power plug to the outlet.

A function does not work when the button is pressed.	
• Is there static electricity in the air?	→ Disconnect the power plug and connect it again.

Sound is not produced.	
• Is the Mute function on?	→ Press the (Mute) button to cancel the function.
• Is the volume set to minimum?	→ Adjust the Volume.

The remote control does not work.	
• Are the batteries drained?	→ Replace with new batteries.
• Is the distance between the remote control and main unit too far?	→ Move closer to the unit.

The TV SoundConnect (TV pairing) failed.	
• Does your TV support TV SoundConnect?	→ TV SoundConnect is supported by some Samsung TVs released from 2012 on. Check your TV to see if it supports TV SoundConnect.
• Is your TV firmware the latest version?	→ Update your TV with the latest firmware.
• Does an error occur when connecting?	→ Contact the Samsung call centre.
• Reset the TV mode and connect again.	→ Press and hold the ▶II button for 5 seconds to reset the TV SoundConnect connection.

The red LED on the subwoofer blinks and the subwoofer is not producing sound.	
• Your subwoofer may not be connected to the main body of the product.	→ Try to connect your subwoofer again. (See Page 17)

The subwoofer drones and vibrates noticeably.	
• Try to adjust the vibration of your subwoofer.	→ Press the **WOOFER** button on your remote control to adjust its value (between -12, -6 to +6).

HW-J7500_J7501_SQ_ENG_0529.indd 31 2015-05-29 1:57:59

SPECIFICATIONS

Model name	HW-J7500 / HW-J7501

GENERAL	USB		5V / 0.5A
	Weight	Main Unit	4 kg
		Subwoofer (PS-WJ7500 / PS-WJ7501)	7.8 kg
	Dimensions (W x H x D)	Main Unit	1230 x 47.5 x 170 mm
		Subwoofer (PS-WJ7500 / PS-WJ7501)	500 x 332 x 161 mm
	Operating Temperature Range		+5°C to +35°C
	Operating Humidity Range		10 % to 75 %
AMPLIFIER	Rated Output Power	Main Unit	20W/CH x 8, 8ohm, THD=10%, 1KHz
		Subwoofer (PS-WJ7500 / PS-WJ7501)	160W, 3ohm, THD=10%, 100Hz
	S/N Ratio (Analogue Input)		65 dB
	Separation (1kHz)		65 dB

* S/N ratio, distortion, separation, and usable sensitivity are based on measurements using AES (Audio Engineering Society) guidelines.

* Nominal specification

- Samsung Electronics Co., Ltd reserves the right to change the specifications without notice.
- Weight and dimensions are approximate.
- For the power supply and Power Consumption, refer to the label attached to the product.

※ **Open Source Licence Notice**

- To send inquiries and requests regarding open sources, contact Samsung via Email (oss.request@samsung.com).

HW-J7500_J7501_SQ_ENG_0529.indd 32 2015-05-29 1:57:59

SAMSUNG

HW-J7500
HW-J7501

מדריך למשתמש

Curved Soundbar

דמיינו את האפשרויות

תודה שרכשתם מוצר זה מתוצרת Samsung.
לקבלת שירות מלא יותר, רשמו את המוצר שברשותכם באתר
www.samsung.com/register

AH68-02820T-00

AH68-02820T-00

מאפיינים

שירותי הזרמת מוזיקה

ה-Curved Soundbar הופך את הצלילה לתוך המוזיקה המועדפת קלה מבעבר הודות ליכולות ה-Wi-Fi שלו. גש ליישום Samsung Multiroom כדי לחוות את הטובים שבשירותי הזרמת המוזיקה למינויים.

הרחבת צליל Surround

התכונה 'הרחבת צליל Surround' מוסיפה תחושת עומק ומרחב לחוויית ההאזנה.

TV SoundConnect

חבר את הטלוויזיה וה-Soundbar בקלות דרך Bluetooth עם TV SoundConnect. היעדר כבלים המשתרכים בין ה-Soundbar לטלוויזיה מאפשר להציג את העיצוב הדק והמלוטש של שתי המערכות תוך שמירה על מראה נקי בסביבת המגורים. שלוט בקלות על ה-Soundbar והטלוויזיה משלט רחוק אחד.

שיתוף מקורות מוזיקה (= Multiroom Play)

שליטה על מקור המוזיקה ושיתופו במספר התקני שמע במיקומים שונים קל יותר באמצעות Multiroom Link. היישום לנייד שולט מרחוק על עוצמת הקול והמוזיקה במערכת בהתקנים שונים, כולל הטלוויזיה, ה-Soundbar, מערכת הקולנוע הביתי ונגן דיסקים מסוג Blu-ray. תיהנה מהשמע שאתה רוצה, היכן שאתה רוצה.

HDMI

HDMI משדר אותות וידאו ושמע בו-זמנית ומספק תמונה ברורה יותר.
המכשיר מצויד גם בפונקציית ARC שמאפשרת להאזין לצליל מהטלוויזיה ב-Soundbar באמצעות כבל HDMI. פונקציה זו זמינה רק כאשר מחברים את המכשיר לטלוויזיה תואמת ARC.

תמיכה בחיבור USB

באפשרותכם לחבר ולהשמיע קובצי מוסיקה מהתקני אחסון USB חיצוניים כגון נגני MP3, זיכרון הבזק USB וכו', באמצעות פונקציית ה-USB HOST של Soundbar.

פונקציית Bluetooth

ניתן לחבר למכשיר ה-Soundbar התקן Bluetooth כדי ליהנות ממוזיקה המושמעת בסטריאו באיכות גבוהה, באופן אלחוטי בלבד!

רישיון

DOLBY DIGITAL
מיוצר תחת רישיון Dolby Laboratories. Dolby וסמל ה-D הכפולה הם סמלים מסחריים של Dolby Laboratories.

dts 2.0 Channel
לפטנטים של DTS, ראה http://patents.dts.com. מיוצר תחת רישיון מ-DTS Licensing Limited. DTS, הסמל, ו-DTS והסמל יחדיו, הם סימנים מסחריים רשומים, ו-DTS 2.0 Channel הוא סימן מסחרי של DTS, Inc. © DTS, Inc. כל הזכויות שמורות.

HDMI
המונחים HDMI ו-HDMI High-Definition Multimedia Interface, וכן הלוגו של HDMI, הם סימנים מסחריים או סימנים מסחריים רשומים של HDMI Licensing LLC בארצות הברית ובמדינות אחרות.

HW-J7500_J7501_SQ_HEB_0529.indd 2 2015-05-29 2:00:01

HEB

מידע אודות בטיחות

הוראות בטיחות

לצמצום הסיכון להתחשמלות, אין להוריד את המכסה (או הדופן האחורית).
המכשיר אינו כולל חלקים שניתנים לתיקון על-ידי המשתמש. לתיקון ושירות, פנו לטכנאי שירות מוסמך.

זהירות **סכנת התחשמלות לא לפתוח**		סמל זה מציין "מתח מסוכן" שקיים בתוך המכשיר ועלול לגרום להתחשמלות או לפציעה.
		סמל זה מציין הוראות חשובות הנלוות למכשיר.

אזהרה : לצמצום הסיכון לשריפה או להתחשמלות, אין לחשוף מכשיר זה לגשם או ללחות.

זהירות : למניעת התחשמלות, יש להתאים את הפין הרחב של התקע לחריץ הרחב בשקע ולהכניסו עד הסוף.

- יש לוודא כי מתקן זה יחובר כל העת לשקע זרם חליפין עם הגנת חיבור הארקה.
- כדי לנתק את המכשיר מהחשמל, יש לשלוף את התקע משקע החשמל, לכן על שקע החשמל להיות זמין לשימוש בכל עת.

זהירות

- אין לחשוף את המכשיר לטפטוף או להתזה של נוזלים. אין להניח על המכשיר כלים מלאים בנוזלים, כגון אגרטלים.
- לכיבוי מוחלט של המכשיר, עליכם להוציא את התקע שלו משקע החשמל. לכן, על התקע להיות זמין ונגיש בכל זמן.

HW-J7500_J7501_SQ_HEB_0529.indd 3 2015-05-29 2:00:01

אמצעי זהירות

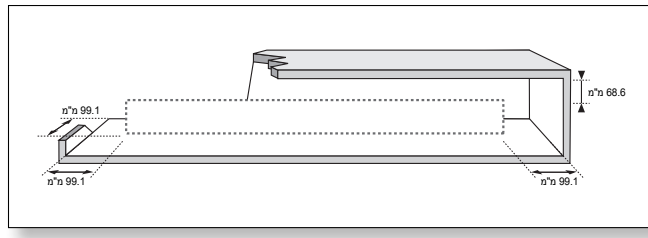

ודאו כי מקור זרם החשמל בביתכם עונה על דרישות המתח שמצוינות במדבקת הזיהוי שבגב המכשיר. התקינו את המכשיר בצורה אופקית על בסיס מתאים (רהיט), כשיש מספיק רווח סביבו לאוורר 10~7 ס"מ. יש לוודא כי פתחי האוורור אינם חסומים. אין להניח את המכשיר על גבי מגברים או מוצרים אחרים שעשויים להתחמם. מכשיר זה מיועד לשימוש ממושך. כדי לכבות את המכשיר לחלוטין, נתקו את כבל החשמל מתקע החשמל. נתקו את המכשיר מהחשמל אם אתם מתכוונים לא להשתמש בו למשך תקופה ארוכה.

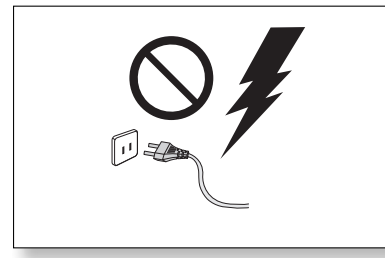

יש להוציא את תקע זרם החילופין מהשקע. קפיצות מתח כתוצאה מברקים עלולות לגרום נזק למכשיר.

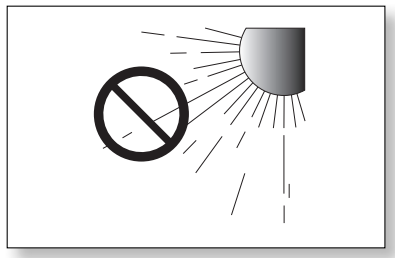

אין לחשוף את המכשיר באופן ישיר לאור יום או למקורות חום אחרים. חשיפה כזו עלולה לגרום להתחממות יתר ולתקלות במכשיר.

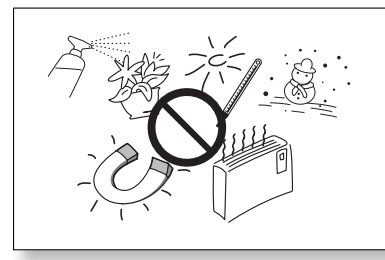

הגנו על המכשיר מפני נוזלים (למשל, אל תקרבו אליו אגרטלים), חום גבוה (מאח בוערת, למשל) או ציוד היוצר שדה מגנטי או חשמלי חזק. נתקו את כבל החשמל משקע החשמל אם המכשיר ניזוק. המוצר שלכם לא נועד לשימוש תעשייתי. מוצר זה נועד לשימוש אישי בלבד.עיבוי עלול להיווצר במידה והמכשיר אוחסן בטמפרטורה נמוכה. אם מובילים את המכשיר בחורף, יש להמתין כשעתיים עד שטמפרטורת המכשיר תגיע לטמפרטורת החדר לפני השימוש.

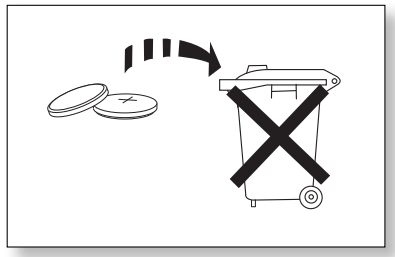

הסוללות המשמשות במכשיר זה מכילות כימיקלים מזיקים לסביבה. אין להשליכן יחד עם האשפה הביתית.

אין להשליך סוללות לאש. אין לקצר או לפרק את הסוללות או לגרום להן להתחממות יתר. קיימת סכנת התפוצצות אם הסוללה מוחלפת באופן שגוי. החלף את הסוללה באותו סוג או בסוג שווה ערך בלבד.

אזהרה, אין לבלוע את הסוללה, סכנת כוויה כימית [השלט רחוק שהגיע עם] מוצר זה מכיל סוללת כפתור. במקרה של בליעת סוללת הכפתור, היא עלולה לגרום לכוויות פנימיות תוך שעתיים ולהוביל למוות. יש לשמור סוללות חדשות וישנות הרחק מהישג ידם של ילדים. אם תא הסוללה לא נסגר כהלכה, הפסק להשתמש במוצר ושמור אותו הרחק מילדים. אם אתה סבור שייתכן שסוללות נבלעו או הושמו בתוך חלק כלשהו של הגוף, פנה מיד לקבלת טיפול רפואי.

HW-J7500_J7501_SQ_HEB_0529.indd 4 2015-05-29 2:00:01

HEB

תוכן עניינים

2 התחלה

2 מאפיינים

3 מידע אודות בטיחות

6 מה כולל המכשיר

7 תיאור

7 לוח עליון/קדמי

8 לוח אחורי/תחתון

9 שלט רחוק

11 התקנה

11 התקנת Soundbar

11 התקנת Soundbar וטלוויזיה לסוג התקנת קיר

14 התקנת Soundbar למעמד טלוויזיה

15 התקנת Soundbar למעמד חופשי

16 הרכבת תפס ההידוק

16 התקנת רגל-מכסה על סאבוופר

17 חיבורים

17 חיבור הסאבוופר

18 התחברות לטלוויזיה

18 חיבורים לטלוויזיה באמצעות כבל HDMI (דיגיטלי)

19 חיבורים לטלוויזיה באמצעות כבל אופטי (דיגיטלי)

20 TV SoundConnect

21 חיבורים להתקן חיצוני

21 כבל HDMI

21 כבל אופטי או AUX

22 USB

24 פונקציות

24 מצב כניסה

25 Bluetooth

27 שימוש בפונקציה Network Standby On

27 שימוש ב-Multiroom Link

29 עדכון תוכנה

31 פתרון בעיות

31 פתרון בעיות

32 נספח

32 מפרטים

תרשימים ואיורים במדריך למשתמש זה ניתנים לצורכי עיון בלבד וייתכן שיהיו שונים ממראה המוצר בפועל.

HW-J7500_J7501_SQ_HEB_0529.indd 5 2015-05-29 2:00:02

מה כולל המכשיר

לפני העיון במדריך למשתמש

קראו את המושגים שלהלן לפני קריאת המדריך למשתמש.

◄ סמלים הנמצאים בשימוש במדריך

סמל	מונח	הגדרה
	זהירות	מציין מקרים שבהם הפונקציה אינה פועלת או שההגדרות בוטלו.
	הערה	מציין המלצות או הוראות בעמוד שעוזרות לתפעול כל פונקציה.

בדקו אם האביזרים שלהלן מצורפים למכשיר.

המכשיר

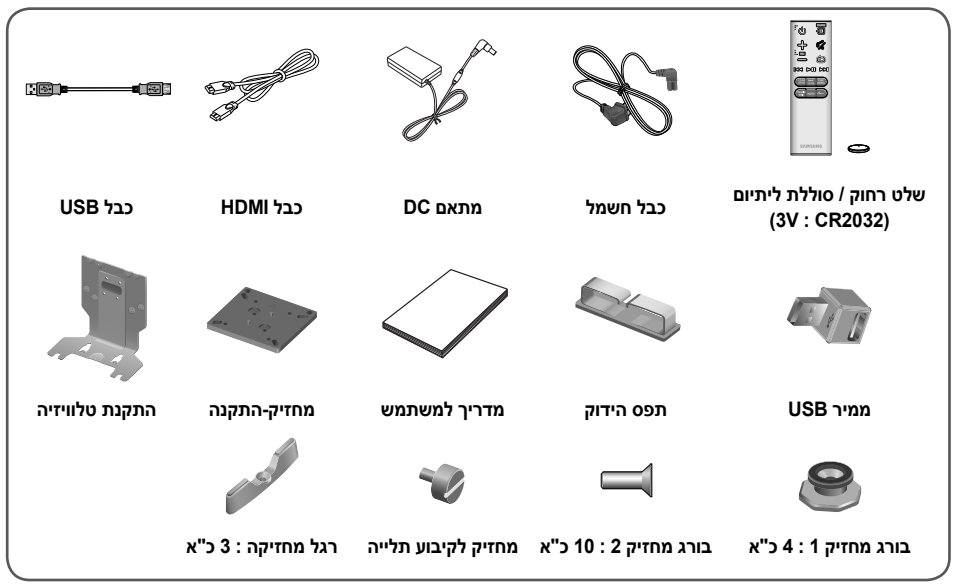

סאבוופר

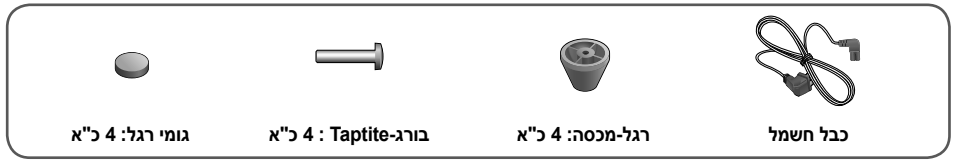

- עיצוב האביזרים עשוי להיות שונה מהאביזרים המוצגים באיורים שלעיל.
- השתמשו כבל ה-USB הייעודי לחיבור התקני USB חיצוניים למכשיר.

HW-J7500_J7501_SQ_HEB_0529.indd 6 2015-05-29 2:00:02

לוח עליון/קדמי

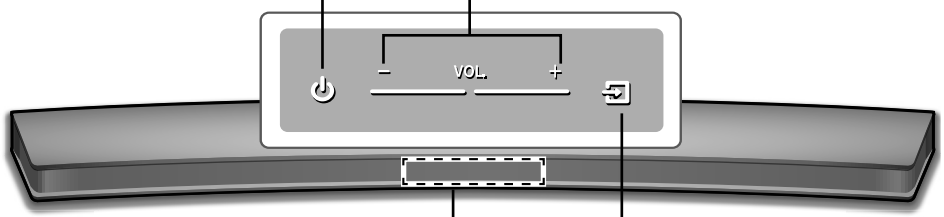
VOL. -/+
כוונן עוצמת הקול.
נערך הנומרי של עוצמת הקול מופיע בתצוגת הלוח הקדמי.
לחצן (הפעלה)
מפעיל ומכבה את Soundbar.
VOL.
תצוגה
מציג את המצב הנוכחי.
לחצן (מקור)
בוחר את הקלט D.IN, AUX, HDMI, BT, TV, USB
בעת הפעלת היחידה, לחיצה על הלחצן (מקור) למשך למעלה משלוש שניות תגרום ללחצן (השתק) לפעול כלחצן (השתק). לביטול הגדרת הלחצן (השתק) לחץ שוב על הלחצן (מקור) למשך למעלה שלוש שניות.

- כדי לנקות התקן זה, נתק את כבל הנמתח מהחשמל ונגב את המוצר באמצעות מטלית רכה ויבשה. מכיוון שאלומיניום הוא חומר אלקטרוסטטי חיובי, עלולה להיות פריקה אלקטרוסטטית.

- לאחר חיבור כבל המתח, לחצן ההפעלה יעבוד תוך ארבע עד שש שניות.
- לאחר שתפעילו את המכשיר, ההשמעה תשתהה למשך 4 עד 5 שניות לפני שיושמעו צלילים.
- אם ברצונך לשמוע צליל מה-Soundbar בלבד, עליך לכבות את הרמקולים של הטלוויזיה דרך התפריט Audio Setup (הגדרות שמע). עיינו בהוראות השימוש המסופקות עם הטלוויזיה שלכם.

לוח אחורי/תחתון

OPTICAL IN (D.IN)

מחבר ליציאה הדיגיטלית (אופטית) של התקן חיצוני.

HDMI OUT (TV-ARC)

שולח אותות שמע ווידאו דיגיטליים בו-זמנית באמצעות כבל HDMI.

HDMI IN

מקבל אותות שמע ווידאו דיגיטליים בו-זמנית באמצעות כבל HDMI. השתמש לחיבור התקן חיצוני נתמך.

LAN

מאפשר לך להשתמש ברשת באמצעות כבל LAN.

AUX IN

חיבור אל היציאה האנלוגית של התקן חיצוני.

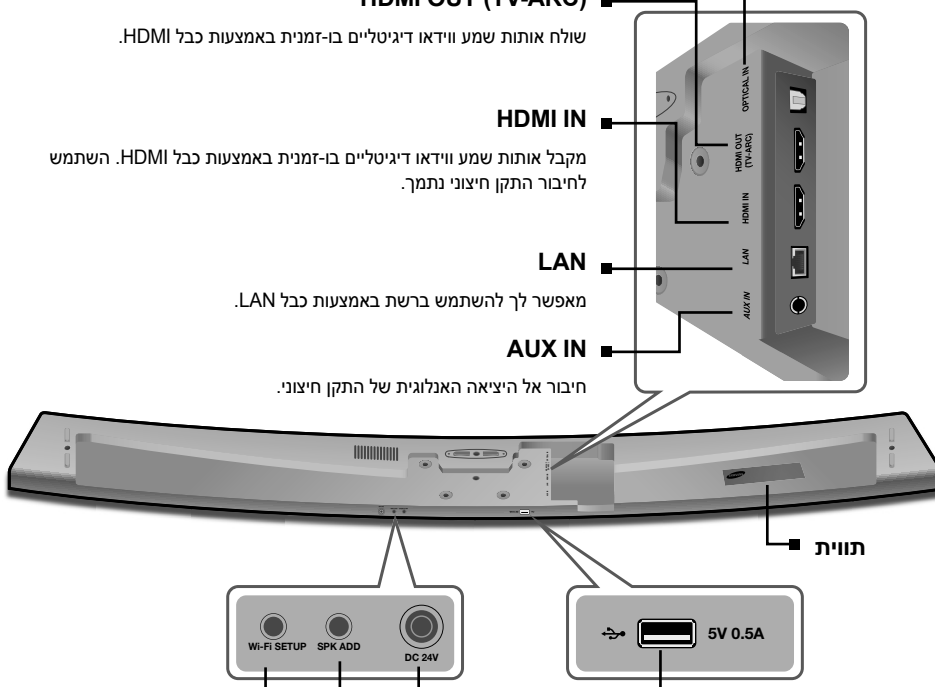

Wi-Fi SETUP

לחץ על לחצן זה כדי לחבר את ה-Soundbar לרשת באמצעות התקנת Wi-Fi.

SPK ADD

לחץ על הלחצן כדי לחבר את Soundbar ל-HUB. (לא מצורף)

DC 24V (כניסת אספקת חשמל)

חבר את מתאם החשמל לשקע אספקת החשמל, ולאחר מכן חבר את תקע מתאם החשמל לשקע בקיר.

(יציאת USB)

חברו התקני USB כאן לצורך השמעת קבצים שעל ההתקנים.

- בעת ניתוק כבל החשמל של מתאם החשמל מהשקע בקיר, אחזו בתקע עצמו. אין למשוך את הכבל כדי לנתקו.
- אין לחבר מכשיר זה או רכיבים אחרים שלו אל שקע החשמל עד להשלמת כל החיבורים בין הרכיבים.

HW-J7500_J7501_SQ_HEB_0529.indd 8 2015-05-29 2:00:09

שלט רחוק

HEB

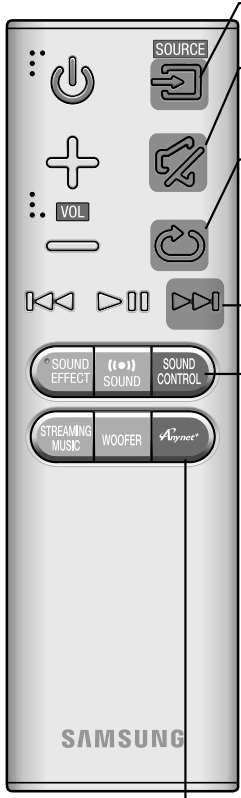

SOURCE

לחץ כדי לבחור מקור המחובר ל-Soundbar.

השתק

ניתן להנמיך את עוצמת הקול לאפס בלחיצת כפתור.
לחצו שנית כדי לחזור אל עוצמת הקול הקודמת שהושמעה.

חזור

ניתן להגדיר את הפונקציה חזור במהלך השמעה מהתקן USB.

OFF - REPEAT : מבטל את ההשמעה החוזרת.

TRACK - REPEAT : השמעת הרצועה שוב ושוב.

ALL - REPEAT : השמעת כל הרצועות שוב ושוב.

RANDOM - REPEAT : השמעת הרצועות בסדר אקראי.
(ניתן להשמיע שוב רצועה שכבר הושמעה.)

דילוג קדימה

אם יש יותר מקובץ אחד על ההתקן שממנו אתה משמיע ואתה לוחץ על הלחצן ⏭, הקובץ הבא ייבחר.

SOUND CONTROL (* השתמש בלחצנים ⏮, ⏭ כדי לכוונן את העוצמה.)

לחץ כדי לבחור **TREBLE**, **BASS** או **AUDIO SYNC**. לאחר מכן השתמש בלחצנים ⏮, ⏭ כי לכוונן את עוצמת הטרבל, בס בין 3- לבין 3+.

לחץ והחזק את הלחצן **SOUND CONTROL** למשך כחמש שניות כדי לכוונן את הצליל עבור כל פס תדרים. 150 Hz, 300 Hz, 600 Hz, 1.2 KHz, 2.5 KHz, 5 KHz, ו-10 KHz
ניתנים לבחירה וניתן לכוונן כל אחד מהם אלו בין 6- ו- 6+.

אם Soundbar מחובר לטלוויזיה דיגיטלית והווידאו לא מסונכרן עם השמע, לחץ על לחצני ה-**SOUND CONTROL** גדי לסנכרן את השמע עם הווידאו. השתמש בלחצני ⏮, ⏭ כדי להגדיר את זמן השהיית השמע בין 0 אלפיות שנייה ל-300 אלפיות שנייה. במצב USB, מצב טלוויזיה ומצב BT, ייתכן שהפונקצייה Audio Sync לא תפעל.

Anynet+

לחץ על הלחצן **Anynet+** כדי להפעיל או לכבות את הפונקציה Anynet+.
(ברירת מחדל : Auto Power Link OFF, **OFF - POWER LINK** / **ON - ANYNET+** או **ON - POWER LINK** / **OFF - ANYNET+**). הפונקציה Anynet+ מאפשרת לך לשלוט על ה-Soundbar באמצעות השלט מטלוויזית Samsung תואמת Anynet+. על ה-Soundbar להיות מחובר לטלוויזיה באמצעות כבל HDMI.

* Auto Power Link
מסנכרן את ה-Soundbar למקור אופטי מחובר באמצעות השקע האופטי כדי שהוא יופעל באופן אוטומטי כשתפעיל את הטלוויזיה. (ראו עמוד 19)

ניתן גם להפעיל אתה פונקציה **Wi-Fi SETUP** על-ידי לחיצה על הלחצן **Anynet+** בשלט והחזקתו למשך 7 שניות לפחות.

- Soundbar הוא שם קנייני של Samsung.
- הפעל את הטלוויזיה באמצעות השלט רחוק שלה.

HW-J7500_J7501_SQ_HEB_0529.indd 9 2015-05-29 2:00:10

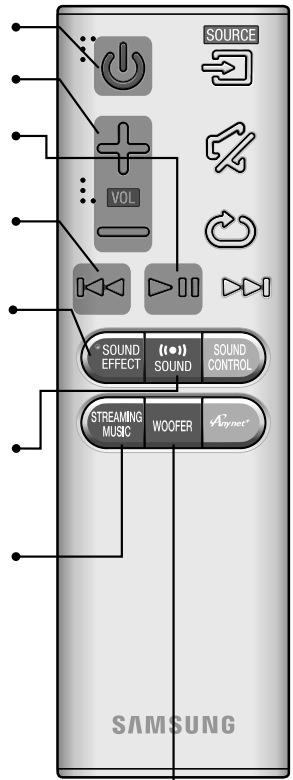

הפעלה

מפעיל ומכבה את Soundbar.

עוצמת קול

ויסות עוצמת הקול של המכשיר.

הפעלה/השהיה

לחץ על הלחצן ▶II כדי להשהות זמנית את השמעת הקובץ.
לחץ שוב על הלחצן ▶II כדי להשמיע את הקובץ שנבחר.

דילוג לאחור

אם יש יותר מקובץ אחד על ההתקן שממנו אתה משמיע ואתה לוחץ על הלחצן I◀◀, הקובץ הקודם ייבחר.

SOUND EFFECT

ניתן לבחור את מצבי הצליל - **STANDARD (צליל מקורי)**, **MUSIC**, **CLEAR VOICE**, **SPORTS**, **MOVIE**, ו-**NIGHT MODE** - בהתאם לסוג המקור שממנו תרצה ליהנות.
בחרו את המצב **STANDARD** אם ברצונכם ליהנות מהצליל המקורי.

SOUND ((●))

צליל סראונד מוסיף עומק ועושר לצליל. לחיצה על לחצן **SOUND ((●))** באופן רציף מעגלי מהגדרות צליל הסראונד:
OFF - SURROUND SOUND, **ON - SURROUND SOUND**

STREAMING MUSIC

לחץ על הלחצן **STREAMING MUSIC** כדי להאזין לתחנת רדיו אינטרנט. כל פעם שתלחץ על לחצן זה, ה-Soundbar יעבור לתחת ברירת המחדל הבאה ויעבור דרך שלוש תחנות ברירת המחדל.
כדי להשתמש בפונקציה **STREAMING MUSIC**, על ה-soundbar להיות מחובר לרשת. (ראו עמוד 27)

*** DRC (Dynamic Range Control)**

מאפשר להפעיל בקרת טווח דינמי עבור שמע מסוג Dolby Digital.
לחץ והחזק את הלחצן **STREAMING MUSIC**, והפונקציה DRC (בקרת טווח דינמי) תעבור בין **ON** ו-**OFF**.

WOOFER (* השתמש בלחצנים I◀◀, ▶▶I כדי לכוון את עוצמת הקול של הוופר.)

לחץ על הלחצן **WOOFER**. לאחר מכן השתמש בלחצנים I◀◀, ▶▶I כדי לכוונן את עוצמת הקול של ה-Subwoofer בין 12-, 6- לבין 6+.
ניתן גם להפעיל אתה פונקציה **SPK ADD** של soundbar על-ידי לחיצה על הלחצן **WOOFER** בשלט והחזקתו למשך 5 שניות לפחות.

התקנת סוללות בשלט הרחוק

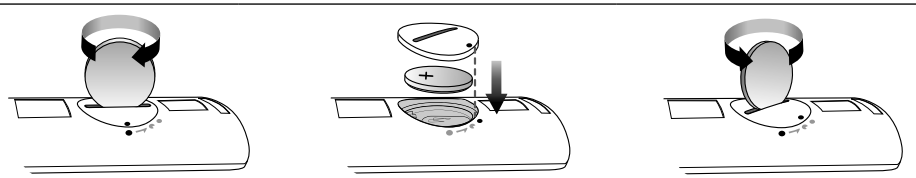

1. השתמש במטבע כמתאים די לסובב את מכסה השלט רחוק נגד כיוון תנועת מחוגי השעון על-מנת להסירו כמתואר באיור למעלה.
2. בכנס סוללת ליתיום 3V. הקפד שהקוטב החיובי (+) יפנה כלפי מעלה בעת הכנסת הסוללה. החזר את מכסה הסוללה ויישר את הסימנים '●' אלא מול אלא כמתואר באיור למעלה.
3. השתמש במטבע מתאים כדי לסובב את מכסה הסוללות של השלט רחוק עם כיוון תנועת מחוגי השעון עד שיתקבע במקומו.

HW-J7500_J7501_SQ_HEB_0529.indd 10 2015-05-29 2:00:11

התקנת SOUNDBAR

HEB

התקנת SOUNDBAR וטלוויזיה לסוג התקנת קיר

- דגם זה מתאים לטלוויזיות הקעורות של Samsung משנת ייצור 2015 S9000/S8500 - "55/"65, S9500 - "65. אנא עיין בדף הבית של Samsung Electronics כדי לראות את רשימת הפרטים של הדגמים המתאימים.
- בהרכבת הסאונדבר לסדרת טלוויזיה JS9500, השתמש ב-Cover-Distance "1.6 הכלול בערכת מיני זרוע קיר של Samsung.
- להרכבת הסאונדבר והטלוויזיה ביחד בעזרת הזרוע קיר, וודא הרכבה של הסאונדבר לטלוויזיה קודם, ולאחר מכן הרכבה של הטלוויזיה.
- להרכבה של הטלוויזיה לקיר, עיין במדריך למשתמש המצורף עם הטלוויזיה אותה רכשת.
- לא ניתן להתקין Soundbar זה לטלוויזיות שאינן תואמות, או במבנה מתלה הטלוויזיה או מעמד הטלוויזיה.

בדקו אם האביזרים שלהלן מצורפים למכשיר.



משמש עבור דגם טלוויזיה S9500, "65 אינץ'

בורג מחזיק 1 : 4 כ"א	בורג מחזיק 2 : 10 כ"א	התקנת טלוויזיה	מחזיק לקיבוע תלייה	מחזיק-התקנה

1. מקם את ה-Soundbar כמתואר באיור, ושים לב שאף אחד מהלחצנים לא נוגע במשטח שעליו הוא מונח.

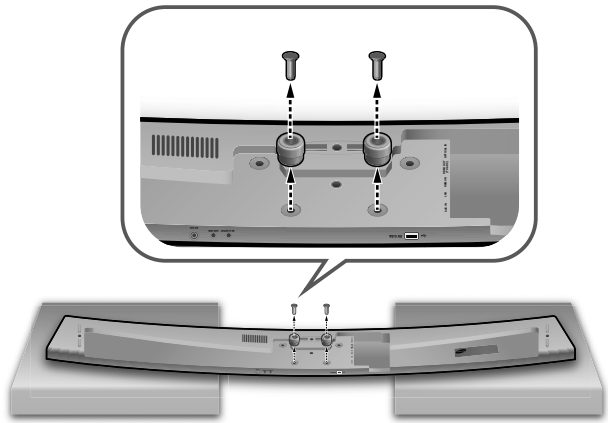

2. הסר את **מחזיק לתמיכה** (2 כ"א) מה-Soundbar כמתואר באיור.

HW-J7500_J7501_SQ_HEB_0529.indd 11 2015-05-29 2:00:12

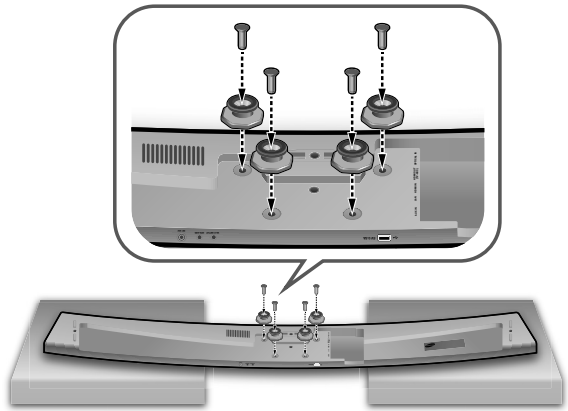

3. הדק את ארבעת **בורג מחזיק 1** וארבעת **בורג מחזיק 2** לארבעת החורים ב-Soundbar, כמתואר באיור.

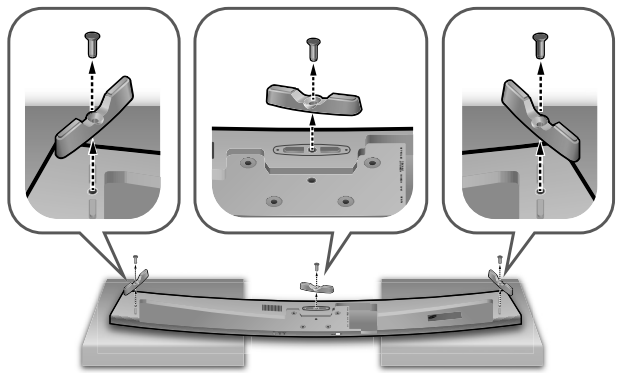

4. אם ה-**רגל מחזיקה** מחובר, ראשית הסר אותו כדי להתקין את מתלה הטלוויזיה.

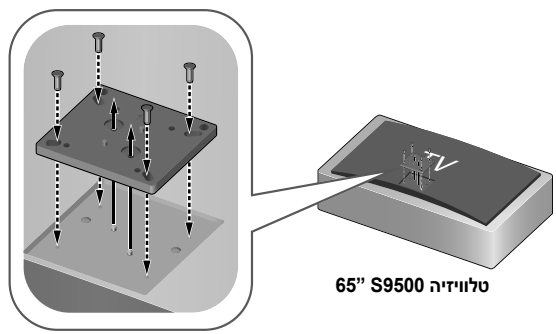

טלוויזיה 65" S9500

5. (בעת התקנה לדגם טלוויזיה S9500, 65 אינץ'. לדגמים אחרים, דלג על של זה).
הרכב את **מחזיק-התקנה** על הטלוויזיה באמצעות מנחה הטלוויזיה, קבע בהידוק **בורג מחזיק 2** (4 כ"א).
יש בזהירות את החור של **מחזיק-התקנה** באופן ממורכז לטלוויזיה, כדי שלא יטה לצד אחד.

HW-J7500_J7501_SQ_HEB_0529.indd 12 2015-05-29 2:00:14

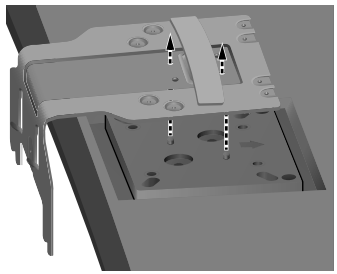

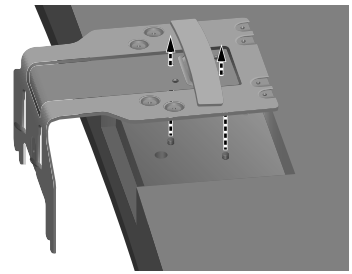

טלוויזיה 65" S9500

6. אם ה-Soundbar מותקן על טלוויזיית Samsung תואמת, השתמש במנחה על הטלוויזיה כדי להרכיב את ה-**התקנת טלוויזיה** על הטלוויזיה באופן מאובטח.

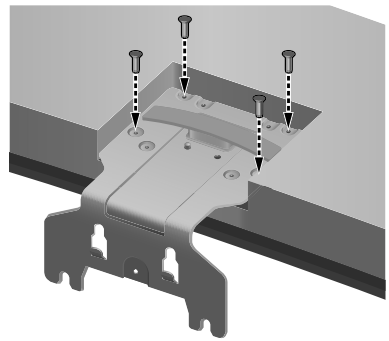

7. הדק את **התקנת טלוויזיה** לטלוויזיה באמצעות ארבעת **בורג מחזיק 2** הנותרים.

8. לאחר חיבור **התקנת טלוויזיה**, תלה את הטלוויזיה על הקיר.

בסיס ה-Soundbar

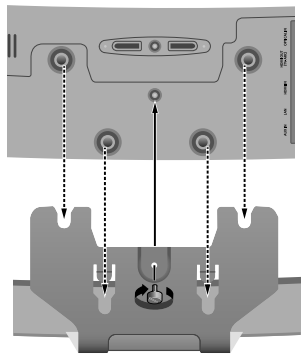

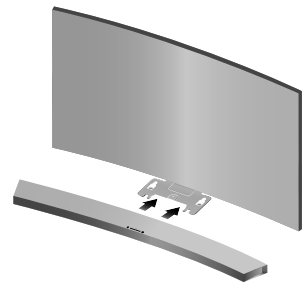

בסיס טלוויזיה עם **התקנת טלוויזיה** מצורף

9. דחוף את ה- Soundbar על **התקנת טלוויזיה** ככל האפשר, כפי שמתואר באיור.

10. הדק את **מחזיק לקיבוע תלייה** ל-Soundbar כדי לקבע את ה-Soundbar אל **התקנת טלוויזיה**.

HW-J7500_J7501_SQ_HEB_0529.indd 13 2015-05-29 2:00:17

התקנת SOUNDBAR למעמד טלוויזיה

ניתן להתקין Soundbar למעמד טלוויזיה אם יש לך Soundbar התואם לטלוויזיה בעלת דגם זה.

בדקו אם האביזרים שלהלן מצורפים למכשיר.

רגל מחזיקה : 3 כ"א	בורג מחזיק 2 : 3 כ"א

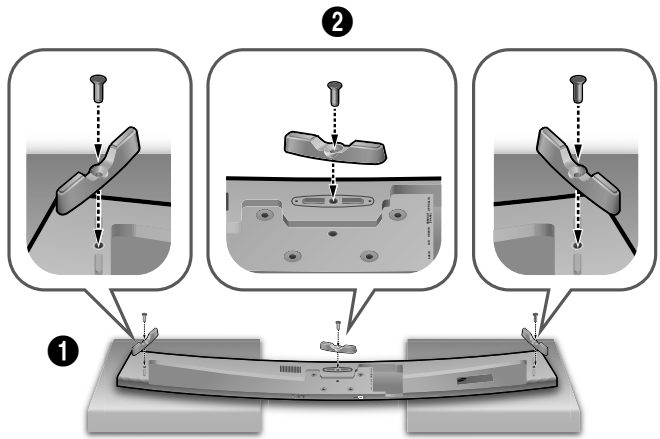

1. מקם את ה-Soundbar כמתואר באיור, ושים לב שאף אחד מהלחצנים לא נוגע במשטח שעליו הוא מונח.
2. קבע **רגל מחזיקה** (3 כ"א) וכן **בורג מחזיק 2** (3 כ"א) ל-Soundbar כפי שמתואר באיור.

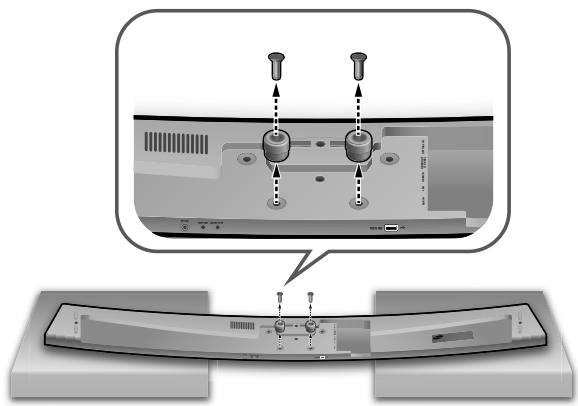

3. הסר את **מחזיק לתמיכה** (2 כ"א) מה-Soundbar כמתואר באיור.

HW-J7500_J7501_SQ_HEB_0529.indd 14 2015-05-29 2:00:19

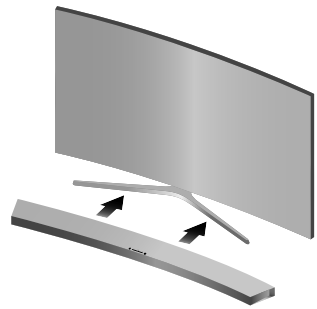

4. יישר את מרכז ה-Soundbar עם המרכז של הבסיס של הטלוויזיה, ולאחר מכן דחוף אותו על על המעמד עד הסוף כמתואר באיור.
היזהר שהטלוויזיה לא תיפול.



- כבד, או לדרוך, על היחידה הראשית.

התקנת SOUNDBAR למעמד חופשי

1. מרכז את ה-Soundbar באזור השטוח שבחזית הטלוויזיה.

HW-J7500_J7501_SQ_HEB_0529.indd 15 2015-05-29 2:00:21

הרכבת תפס ההידוק

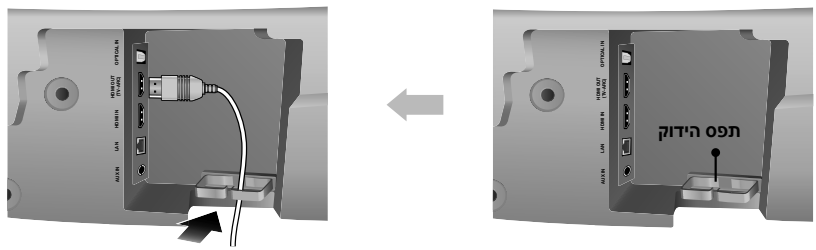

חבר את תפס ההידוק ליחידה כמתואר, ולאחר מכן העבר את הכבלים דרך תפס ההידוק כדי לשמור עליהם מסודרים.

התקנת רגל-מכסה על סאבוופר

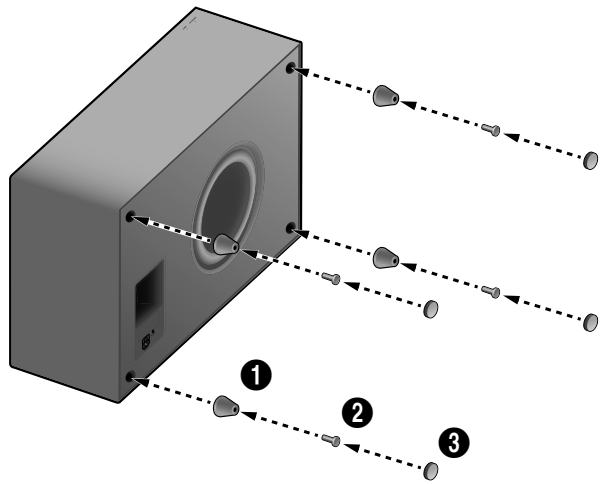

1. מקם כל **רגל-מכסה** על ארבעת החורים התואמים כמתואר באיור.
2. הכנס **בורג-Taptite** (4 כ"א) לחור התואם של **רגל-מכסה**.
3. חסום את החורים ב-**גומי רגל** (4 כ"א) כדי להשלים.

HW-J7500_J7501_SQ_HEB_0529.indd 16 2015-05-29 2:00:22

HEB

- אין לחבר את כבל החשמל של מוצר זה או של הטלוויזיה לשקע החשמל עד להשלמת כל החיבורים בין הרכיבים.
- לפני העברה או התקנה של מוצר זה, יש להקפיד לכבות אותו ולנתק את כבל המתח.

חיבור הסאבוופר

חיבור אוטומטי לסאבוופר

על היחידה הראשית והסאבוופר להתחבר (חיבור אלחוטי) כאשר מפעילים את היחידה הראשית והסאבוופר.

- אם הוא מחובר לחלוטין, נורית ה-LED הכחולה בסאבוופר תפסיק להבהב.

חיבור ידני לסאבוופר

מזהה ההתקשרות של הסאבוופר מוגדר על-ידי היצרן, וההתקשרות (חיבור אלחוטי) בין היחידה הראשית לסאבוופר צריכה להתבצע באופן אוטומטי בעת הפעלתם. אם המחוון Link לא נדלק בעת הפעלת היחידה הראשית והסאבוופר, הגדר את המזהה באופן הבא. השלם תהליך זה תוך 30 שניות לאחר תחילת ההבהוב של המחוון 'קישור' בסאבוופר.

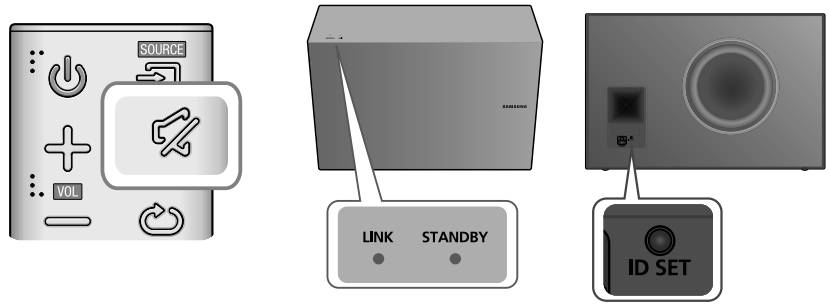

1. חברו את המכשיר ואת הסאבוופר לחשמל.
2. לחצו על הלחצן **ID SET** בגב הסאבוופר בעזרת חפץ קטן וחד למשך 5 שניות.
   - המחוון STANDBY יכבה והמחוון LINK (נורית כחולה) יהבהב במהירות.
3. כאשר היחידה הראשית כבויה (במצב STANDBY), לחץ והחזק את (השתק) בשלט רחוק למשך חמש שניות.
4. ההודעה **ID SET** תופיע על תצוגת ה-Soundbar.
5. כדי לסיים את הקישור, הפעל את היחידה הראשית כאשר הנורית הכחולה של הסאבוופר מהבהבת.
   - כעת היחידה הראשית והסאבוופר אמורים להיות מקושרים (מחוברים).
   - המחוון קישור (נורית כחולה) על גבי הסאבוופר צריכה להיות דלוק.
   - אם המחוון קישור לא מאיר בכחול, תהליך הקישור נכשל. כבה את היחידה הראשית והתחל שוב משלב 2.
   - תוכלו ליהנות מצליל משופר מהסאבוופר האלחוטי על-ידי בחירת אפקט הצליל. (ראו עמוד 10)

HW-J7500_J7501_SQ_HEB_0529.indd 17 2015-05-29 2:00:23

- לפני העברה או התקנה של המוצר, יש להקפיד לכבות אותו ולנתק את כבל המתח.
- אם היחידה הראשית כבויה, הסאבוופר האלחוטי יהיה במצב המתנה והנורית 'המתנה' בצד העליון תידלק לאחר שהמחוון 'קישור' (נורית כחולה) תהבהב למשך 30 שניות.
- אם אתה משתמש בהתקן העושה שימוש באותו התדר (2.4GHz) של ה-Soundbar בקרבת ה-Soundbar, עלולה להיווצר הפרעה.
- מרחק השידור של האות האלחוטי בין היחידה הראשית לסאבוופר הוא בערך 10 מטר אבל עשוי להשתנות בהתאם לסביבת ההפעלה.

אם יש קיר בטון-פלדה או קיר מתכת בין המכשיר לבין הסאבוופר האלחוטי, המערכת עשויה לא לפעול בכלל מכיוון שהאות האלחוטי לא יכול לחדור דרך מתכת.

- אם היחידה המרכזית אינה מייצרת חיבור אלחוטי, עקוב אחר שלבים 1-5 בדף הקודם על מנת להגדיר מחדש את החיבור בין היחידה המרכזית והסאבוופר האלחוטי.

- אנטנת הקליטה האלחוטית מובנית בתוך הסאבוופר האלחוטי. יש להרחיק את המכשיר ממים ומלחות.
- למיטוב חוויית ההאזנה, ודאו שהאזור שמסביב לסאבוופר האלחוטי נקי ממכשולים.

התחברות לטלוויזיה

חיבורים לטלוויזיה באמצעות כבל HDMI (דיגיטלי)

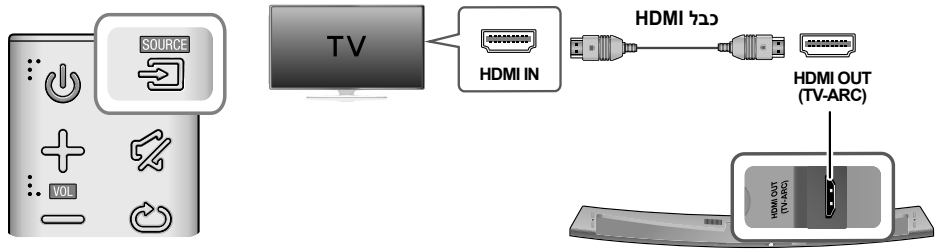

1. חבר כבל HDMI מהכניסה **HDMI OUT (TV-ARC)** שבגב המוצר ליציאה HDMI IN שבטלוויזיה שלך.
2. לחץ על הלחצן (מקור) בלוח העליון של היחידה הראשית או על הלחצן **SOURCE** בשלט רחוק כדי לבחור את מצב **D.IN**.

- HDMI הנו ממשק המאפשר את השידור הדיגיטלי של וידאו וקבצי שמע באמצעות חיבור אחד בלבד.
- אם יש לטלוויזיה יציאת ARC, חבר את כבל ה-HDMI ליציאה HDMI IN (ARC).
- מומלץ במידת האפשר להשתמש בכבל HDMI ללא ליבה. אם נעשה שימוש בכבל HDMI עם ליבה, השתמש באחד בעל ליבה של פחות מ-14 מ"מ.
- יש להפעיל את +Anynet.
- פונקציה זו אינה זמינה אם כבל ה-HDMI לא תומך ב-ARC.

HW-J7500_J7501_SQ_HEB_0529.indd 18 2015-05-29 2:00:24

HEB

חיבורים לטלוויזיה באמצעות כבל אופטי (דיגיטלי)

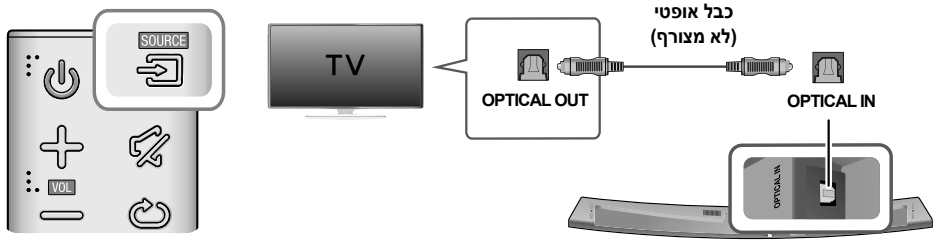

1. חבר את **OPTICAL IN** (שמע) ב-Soundbar לשקע OPTICAL OUT של הטלוויזיה.
2. לחץ על הלחצן (מקור) בלוח העליון של היחידה הראשית או על הלחצן **SOURCE** בשלט רחוק כדי לבחור את מצב **D.IN**.

◄ Auto Power Link

אם חיברת את היחידה הראשית לטלוויזיה באמצעות כבל אופטי, הגדר את הפונקציה Auto Power להיות מופעלת על-מנת שה-Soundbar יופעל באופן אוטומטי כאשר מפעילים את הטלוויזיה.

AUTO POWER LINK	תצוגה
פעיל	**ON - POWER LINK / OFF - ANYNET+**
כבוי	**OFF - POWER LINK / ON - ANYNET+**

1. חבר את ה-Soundbar והטלוויזיה בכבל 'אופטי'. (לא מצורף)
2. לחץ על הלחצן (מקור) בלוח העליון של היחידה הראשית או על הלחצן **SOURCE** בשלט רחוק כדי לבחור את מצב **D.IN**.
3. לחץ על הלחצן **Anynet+** בשלט רחוק כדי להפעיל או לכבות את הפונקציה Auto Power Link.

- בהתאם להתקן המחובר, ייתכן ש-Auto Power Link לא תפעל.

HW-J7500_J7501_SQ_HEB_0529.indd 19 2015-05-29 2:00:25

TV SOUNDCONNECT

ניתן ליהנות מצליל הטלוויזיה דרך ה-Soundbar שמחובר לטלוויזיית Samsung שתומכת בפונקציה TV SoundConnect.

1. הפעל את הטלוויזיה ואת ה-Soundbar.
   - הפעלאתהתפריטשלהטלוויזיה.
   - עבורל"הגדרותרמקול" בכרטיסייה" צליל".
   - הגדראתהתפריט "הוספהתקןחדש" למצב "מופעל".
2. לחץ על הלחצן (מקור) בלוח העליון של היחידה הראשית או על הלחצן **SOURCE** בשלט רחוק כדי לבחור את מצב **TV**.
3. בטלוויזיה תופיע הודעה השואלת אם להפעיל את הפונקציה TV SoundConnect.
4. בחר **<כן>** כדי לסיים את חיבור הטלוויזיה וה-Soundbar באמצעות השלט רחוק של הטלוויזיה.

- העברת המצב של Soundbar מטלוויזיה למצב אחר תסיים באופן אוטומטי את TV SoundConnect.
- כדי לחבר את ה-Soundbar לטלוויזיה אחרת, יש לסיים את החיבור הקיים.
- סיים את החיבור לטלוויזיה הקיימת, ולאחר מכן לחץ על הלחצן ▶II בשלט רחוק למשך יותר מחמש שניות כדי להתחבר לטלוויזיה אחרת.

- הפונקציה TV SoundConnect (SoundShare) נתמכת על-ידי חלק מטלוויזיות Samsung שהושקו משנת 2012. בדוק אם הטלוויזיה שלך תומכת בפונקציה TV SoundConnect (SoundShare) לפני שאתה מתחיל. (למידע נוסף, עיין במדריך למשתמש של הטלוויזיה.)
- אם טלוויזיית Samsung הושקה לפני 2014, בדוק בתפריט ההדרות של SoundShare.
- אם המרחק בין הטלוויזיה לבין Soundbar עולה על 10 מטר, ייתכן שהחיבור לא יהיה יציב או השמע עלול לגמגם. במקרה כזה, מקם מחדש את הטלוויזיה או ה-Soundbar כך שהם יימצאו בטווח הפעולה, ולאחר מקן הקם מחדש את החיבור של TV SoundConnect.
- טווח פעולה של TV SoundConnect:
  - טווח ההפעלה המומלץ לצימוד: עד 2 מטר
  - טווח פעולה מומלץ: עד 10 מטר
- הלחצנים 'הפעל/השהה', 'הבא' ו'הקודם' ב-Soundbar או בשלט רחוק של ה-Soundbar לא שולטים על הטלוויזיה.

HW-J7500_J7501_SQ_HEB_0529.indd 20 2015-05-29 2:00:26

HEB

חיבורים להתקן חיצוני

כבל HDMI

HDMI הוא ממשק דיגיטלי סטנדרטי לחיבור מכשירים כגון טלוויזיות, מקרנים, נגני DVD, נגני Blu-ray, ממירים ועוד.

בגלל ש-HDMI משדר את איכות האות הדיגיטלי המקסימלי, ניתן ליהנות מווידאו ושמע מעולים כפי שנוצרו במקור הדיגיטלי.

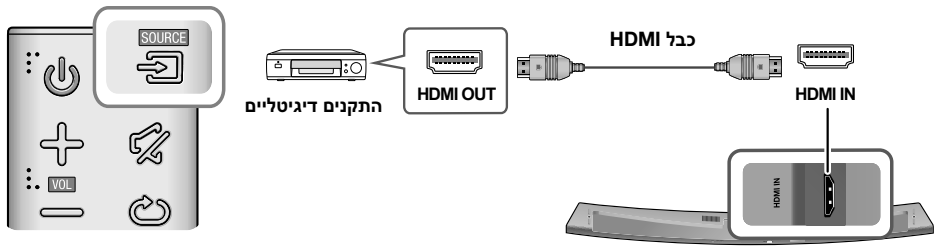

1. חבר כבל HDMI מהכניסה **HDMI IN** שבגב המוצר ליציאה HDMI OUT שבמכשיר החשמלי שלך.
2. לחץ על הלחצן (מקור) בלוח העליון של היחידה הראשית או על הלחצן **SOURCE** בשלט רחוק כדי לבחור את מצב **HDMI**.

כבל אופטי או AUX

היחידה מגיעה עם שקע דיגיטלי אופטי אחד ושקע שמע אנלוגי אחד כך שיש שתי דרכים לחבר אותה להתקנים חיצוניים.

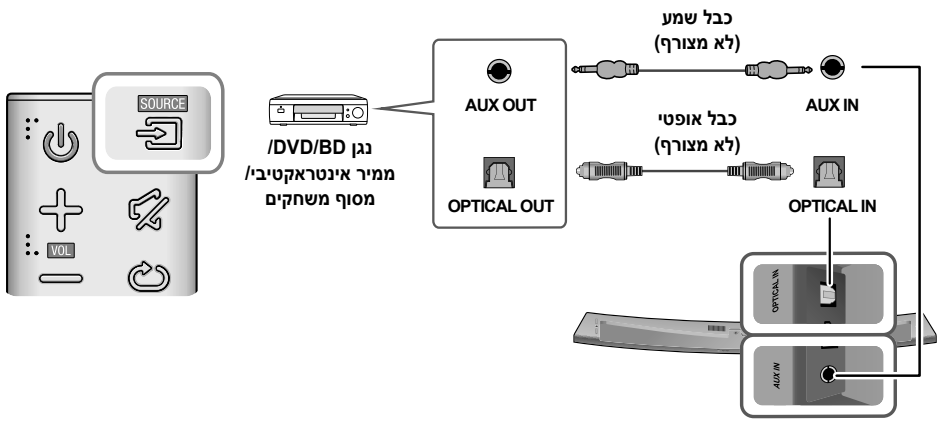

HW-J7500_J7501_SQ_HEB_0529.indd 21 2015-05-29 2:00:26

◄ כבל AUX

1. חבר את **AUX IN** (שמע) ביחידה הראשית לשקע AUDIO OUT של התקן המקור.
2. לחץ על הלחצן (מקור) בלוח העליון של היחידה הראשית או על הלחצן **SOURCE** בשלט רחוק כדי לבחור את מצב **AUX**.

◄ כבל אופטי

1. חבר את **OPTICAL IN** (שמע) ביחידה הראשית לשקע OPTICAL OUT של התקן המקור.
2. לחץ על הלחצן (מקור) בלוח העליון של היחידה הראשית או על הלחצן **SOURCE** בשלט רחוק כדי לבחור את מצב **D.IN**.

USB

ניתן להשמיע קובצי מוזיקה השמורים על התקני אחסון USB דרך ה-Soundbar.

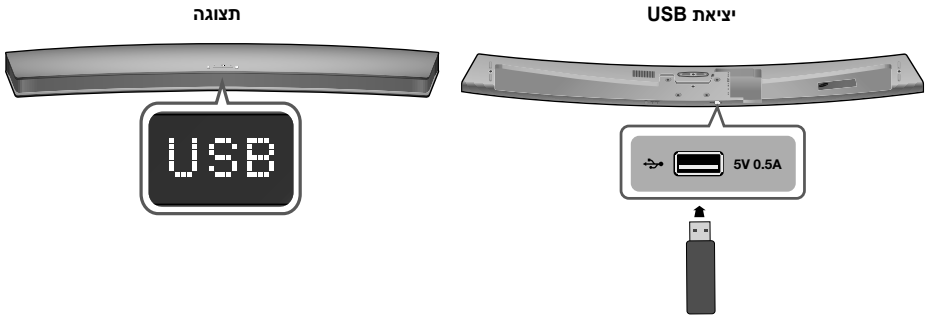

1. חבר את התקן ה-USB ליציאת ה-USB של המוצר.
2. לחץ על הלחצן (מקור) בלוח העליון של היחידה הראשית או על הלחצן **SOURCE** בשלט רחוק כדי לבחור את מצב **USB**.
3. **USB** יופיע במסך.
   - חיבור ה-Soundbar להתקן ה-USB הושלם.
   - המערכת נכבית באופן אוטומטי (Auto Power Off) אם לא מחובר אליה התקן USB במשך יותר מ-15 דקות.

◄ לפני חיבור התקן USB

שימו לב לנתונים הבאים:

- אם שם הקובץ בהתקן ה-USB ארוך מ-10 תווים, הוא לא מוצג ב-Soundbar.
- ייתכן שמכשיר זה לא יהיה תואם לסוגים מסוימים של התקני אחסון USB.
- המכשיר תומך במערכות קבצים מסוג FAT16 ו-FAT32.
  - מערכת הקבצים NTFS אינה נתמכת.
- חברו את התקן ה-USB ישירות אל כניסת ה-USB שבמכשיר. אחרת, ייתכן שתיווצר בעיית תאימות של התקן ה-USB.

HW-J7500_J7501_SQ_HEB_0529.indd 22 2015-05-29 2:00:28

- אין לחבר אל המוצר התקני אחסון מרובים באמצעות קורא כרטיסים משולב. הוא עשוי שלא לפעול כהלכה.
- המכשיר אינו תומך בפרוטוקולי PTP של מצלמות דיגיטליות.
- אין לנתק את התקן ה-USB בזמן שהוא מעביר קבצים.
- המכשיר אינו מנגן קובצי מוסיקה בהגנת DRM (MP3, WMA) שהתקבלו מאתר מסחרי.
- המכשיר אינו תומך בכוננים קשיחים חיצוניים.
- המכשיר אינו תומך בטלפונים ניידים.
- רשימת תאימות:

הרחבה	קודק	טווח דגימה	קצב סיבית
*.mp3	MPEG 1 Layer1	48/44.1/32	32 ~ 448 kbps
	MPEG 1 Layer2	48/44.1/32	32 ~ 384 kbps
	MPEG 1 Layer3	48/44.1/32	32 ~ 320 kbps
	MPEG 2 Layer3	48/44.1/32/24/22.05/16	8 ~ 160 kbps
	MPEG 2.5 Layer3	48/44.1/32/24/22.05/16/12/11.025/8	8 ~ 160 kbps
*.wma	Wave_Format_MSAudio1	-	-
	Wave_Format_MSAudio2	-	-
	WMA Professional	לא נתמך	-
*.wav	-	8 KHz ~ 192 KHz	8.8 Mbps ~
*.ogg	-	8 KHz ~ 48 KHz	-
*.flac	-	8 KHz ~ 192 KHz	5.6 Mbps ~
*.m4a	Alac (Apple lossless Audo codec)	8 KHz ~ 192 KHz	1 Mbps ~
*.aif	פורמט החלפת קוצי שמע	8 KHz ~ 192 KHz	4.4 Mbps ~

- אם יש יותר מדי תיקיות וקבצים שמורים בהתקן ה-USB, הקריאה עשויה להימשך זמן מה.

HW-J7500_J7501_SQ_HEB_0529.indd 23 2015-05-29 2:00:29

מצב כניסה

לחץ על הלחצן (מקור) שבלוח העליון של היחידה הראשית או על הלחצן **SOURCE** בשלט רחוק כדי לבחור את המצב שאתה רוצה.

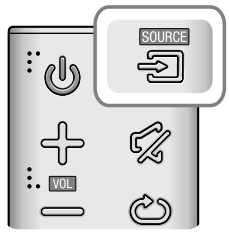

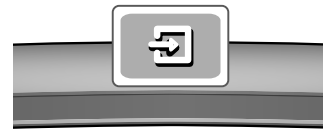

מצב כניסה	תצוגה
כניסה דיגיטלית אופטית קלט ARC (HDMI OUT)	**D.IN**
כניסת AUX	**AUX**
כניסת HDMI	**HDMI**
מצב BLUETOOTH	**BT**
TV SoundConnect	**TV**
מצב USB	**USB**

המכשיר נכבה באופן אוטומטי במקרים הבאים:

- מצב ARC/USB/TV/BT/HDMI/D.IN
  - אם אין אות שמע במשך 15 דקות.
- מצב AUX

  די להפעיל או לכבות את הפונקציה Auto Power Down לחץ והחזק את הלחצן ▶II למשך 5 שניות.
  OFF - AUTO POWER DOWN / **ON - AUTO POWER DOWN** יופיע בתצוגה.
  - אם כבל ה-AUX מנותק למשך 15 דקות.
  - אם לא מתקבל קלט KEY במשך שמונה שעות בזמן שכבל AUX מחובר.

HW-J7500_J7501_SQ_HEB_0529.indd 24 2015-05-29 2:00:30

BLUETOOTH

HEB

ניתן לחבר למכשיר ה-Soundbar התקן Bluetooth כדי ליהנות ממוזיקה המושמעת בסטריאו באיכות גבוהה, באופן אלחוטי בלבד!

לחיבור ה-SOUNDBAR להתקן BLUETOOTH

בדקו אם התקן ה-Bluetooth תומך בפונקציית אוזניות הסטריאו תואמת ה-Bluetooth.

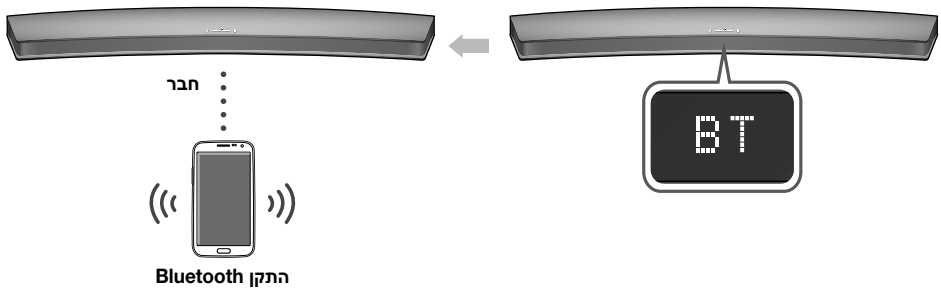

1. לחץ על הלחצן (מקור) בלוח העליון של היחידה הראשית או על הלחצן **SOURCE** בשלט רחוק כדי לבחור את מצב **BT**.
   - תוצג ההודעה **BT READY** בתצוגה הקדמית של ה-Soundbar.
2. בחרו בתפריט Bluetooth שבהתקן ה-Bluetooth שאותו תרצו לחבר. (עיינו במדריך למשתמש של התקן ה-Bluetooth)
3. בחרו באפשרות "**[Samsung] HW-Jxxxx**" מתוך הרשימה.
   - כאשר ה-Soundbar מחובר למכשיר Bluetooth, הוא יציג [**שם מכשיר Bluetooth**] ← **BT** בלוח הקדמי.
   - ניתן להציג את שם המוצר רק באנגלית. יוצג קו תחתון " _ " אם השם אינו באנגלית.
   - אם צימוד התקן ה-Bluetooth ל-Soundbar נכשל, מחקו את ה-"**[Samsung] HW-Jxxxx**" הקודם שמצא התקן ה-Bluetooth ובצעו חיפוש חדש עבור Soundbar.
4. השמיעו מוסיקה בהתקן המחובר.
   - באפשרותכם להאזין למוסיקה המושמעת בהתקן ה-Bluetooth המחובר על גבי המערכת Soundbar.
   - במצב **BT**, הפונקציות הפעלה/השהייה/הבא/הקודם אינן זמינות. אולם, פונקציות אלה זמינות במכשירי Bluetooth התומכים ב-AVRCP.

- אם תופיע בקשה לקוד PIN בעת חיבור מכשיר Bluetooth, הזן <0000>.
- ניתן לצמד התקן Bluetooth אחד בלבד בכל פעם.
- חיבור Bluetooth יסתיים כאשר Soundbar יועבר למצב כבוי.
- ייתכן שה-Soundbar לא יבצע חיפוש או חיבור Bluetooth כהלכה בתנאים הבאים:
  - אם קיים שדה חשמלי חזק מסביב ל-Soundbar.
  - אם מספר התקני Bluetooth מוצמדים בו-זמנית ל-Soundbar.
  - אם התקן ה-Bluetooth כבוי, אינו נמצא במקומו או שיש בו תקלה.
  - שימו לב שישנם התקנים כגון מיקרוגלים, מתאמי LAN אלחוטיים, מנורות פלואורסנט ותנורי גז המשתמשים באותו טווח תדרים שבו משתמש התקן ה-Bluetooth, והעשויים לגרום להפרעות חשמליות.

HW-J7500_J7501_SQ_HEB_0529.indd 25 2015-05-29 2:00:30

- ה-Soundbar תומך בנתוני SBC (44.1 kHz, 48 kHz).
- יש לחבר התקן Bluetooth התומך בפונקציית A2DP (AV) בלבד.
- לא ניתן לחבר את ה-Soundbar להתקן Bluetooth התומך בפונקציית HF (ללא התערבות המשתמש) בלבד.
- לאחר צימוד ה-Soundbar להתקן Bluetooth, בחירה של **'[Samsung] HW-Jxxxx'** מרשימת ההתקנים הסרוקים של ההתקן תשנה באופן אוטומטי את ה- Soundbar למצב **BT**.
- זמין רק אם Soundbar מופיע ברשימת המכשירים המוצמדים של מכשיר ה-Bluetooth.
  (על מכשיר ה-Bluetooth וה-Soundbar לבצע הצמדה מראש לפחות פעם אחד).
- Soundbar יופיע ברשימת המכשירים שנסרקו של מכשיר ה-Bluetooth רק כאשר Soundbar מציג **BT READY**.
- במצב TV SoundConnect, לא ניתן להצמיד את ה-Soundbar למכשיר Bluetooth אחר.

לניתוק התקן ה-BLUETOOTH מה-SOUNDBAR

באפשרותכם לנתק את התקן ה-Bluetooth מ-Soundbar. לקבלת הוראות יש לעיין במדריך למשתמש של התקן ה-Bluetooth.

- Soundbar ינותק.
- כאשר Soundbar מנותק מהתקן ה-Bluetooth device, בתצוגה הקדמית של Soundbar יופיע **BT DISCONNECTED**.

לניתוק SOUNDBAR מהתקן ה-BLUETOOTH

לחץ על הלחצן **SOURCE** שבשלט רחוק או על הלחצן (מקור) בלוח העליון של המוצר כדי לעבור ממצב **BT** למצב אחר או כדי לכבות את ה-Soundbar.

- התקן ה-Bluetooth המחובר ימתין זמן מסוים לתגובה מ-Soundbar לפני סיום החיבור. (זמן הניתוק עשוי להשתנות בהתאם להתקן ה-Bluetooth)

- במצב חיבור Bluetooth, חיבור ה-Bluetooth יאבד אם המרחק בין ה-Soundbar והתקן ה-Bluetooth עולה על הטווח האפשרי 10 מטר.
- Soundbar ייכבה באופן אוטומטי לאחר 15 דקות במצב מוכן.

◄ עוד על Bluetooth

Bluetooth היא טכנולוגיה שמאפשרת להתקנים תואמי Bluetooth להתחבר בקלות אלה עם אלה באמצעות חיבורים אלחוטיים קצרים.

- התקן Bluetooth עשוי לגרום לרעשים או לתקלות, בהתאם לאופן השימוש, כאשר:
  - חלק מגופכם נוגע במערכת הקליטה/שידור של התקן ה-Bluetooth או ה-Soundbar.
  - השידורים מההתקן נחסמים על-ידי מכשולים כגון קיר, פינה או מחיצות משרדיות.
  - שידורי ההתקן משובשים על-ידי הפרעות חשמליות מהתקנים המשדרים באותו טווח תדרים, כגון מכשירים רפואיים, מיקרו-גלים ו-LAN אלחוטי.
- צמדו את ה-Soundbar עם התקן ה-Bluetooth תוך שמירת מרחק קצר.
- ככל שהמרחק בין ה-Soundbar לבין התקן ה-Bluetooth גדול יותר, איכות הקליטה תהיה גרועה יותר.
  אם המרחק יהיה גדול מטווח הפעולה של התקן ה-Bluetooth, החיבור יתנתק.
- באזורים בעלי איכות קליטה ירודה, ייתכן שחיבור ה-Bluetooth לא יפעל כהלכה.
- חיבור ה-Bluetooth פועל כהלכה רק כאשר הוא נמצא בקרבת המערכת. החיבור יתנתק באופן אוטומטי כאשר ההתקן יוצב מחוץ לטווח הפעולה. גם בתוך טווח הפעולה, ייתכן שאיכות הקול תיפגע בשל מכשולים כגון קירות או דלתות.

HW-J7500_J7501_SQ_HEB_0529.indd 26 2015-05-29 2:00:31

HEB

שימוש בפונקציה NETWORK STANDBY ON

הפונקציה Network Standby On תהפוך לזמינה אם החיבור האלחוטי בין ההתקן החכם וה-Soundbar בוצע בהצלחה. פונקציה זו מפעילה את ה-Soundbar באופן אוטומטי כאשר התקן חכם מנסה להתחבר אל ה-Soundbar באמצעות Bluetooth או Wi-Fi. ה-Soundbar הופעל באמצעות חיבור Bluetooth, מצב הקלט שלו מוגדר ל-**BT** באופן אוטומטי. הפעלת ה-Soundbar באמצעות Wi-Fi זמינה רק דרך היישום. לפרטים נוספים, עיין במדריך באינטרנט.

1. חבר את ההתקן החכם ל-Soundbar.
2. הפעל את הפונקציה Network Standby On על-ידי לחיצה על הלחצן ⏭ בשלט של ה-Soundbar למשך יותר מחמש שניות. ניתן לכבות את הפונקציה על-ידי לחיצה חוזרת על הלחצן ⏭ למשך יותר מחמש שניות.

- זמין רק אם ה-Soundbar רשום ברשימת ההתקנים המוצמדים של ההתקן החכם. (צריכה להתבצע הצמדה של ההתקן החכם וה-Soundbar לפחות פעם אחד קודם לכן).
- Soundbar יופיע ברשימת ההתקנים לחיפוש של ההתקן החכם רק כאשר ה-Soundbar מציג [BT READY] או [WiFi READY].
- במצב SoundConnect TV, לא ניתן להצמיד את ה-Soundbar להתקן חכם אחר.
- אם הפונקציה Network Standby On לא פעלה
  - ה-Network Standby On כבוי.
- חיבור Wi-Fi ל-Soundbar יסתיים אם כבל החשמל נותק או אם זרק החשמל נותק. הפעל את ה-Soundbar והתחבר מחדש.

שימוש ב-MULTIROOM LINK

לאחר שה-Soundbar להתקן חכם באמצעות היישום Multiroom, ניתן לחבר יחד מספר התקני Samsung Multiroom באופן אלחוטי.

לפני שתתחיל

◄ יסודות התקשורת

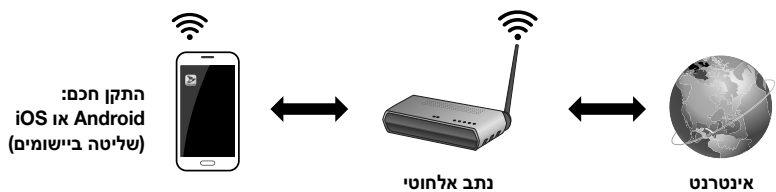

1. דרישות: נתב אלחוטי, התקן חכם
2. על הנתב האלחוטי להיות מחובר לאינטרנט.
3. על ההתקן החכם להיות מחובר לנתב באמצעות חיבור Wi-Fi.

HW-J7500_J7501_SQ_HEB_0529.indd 27 2015-05-29 2:00:31

התקנת היישום SAMSUNG MULTIROOM

כדי להשתמש ב-Soundbar, עליך להוריד את היישום Samsung Multiroom ולהתקין אותו על-ידי גישה ליישום דרך Google play או App Store. כשהיישום Samsung Multiroom מותקן, ניתן להשמיע מוסיקה השמורה בהתקן החכם, מהתקנים מחוברים ומספקי תוכן אחרים, וכן מתחנות רדיו אינטרנט.

◄ Android או iOS

הורד את היישום Samsung Multiroom מ-Google Play או מ-App Store של ההתקן החכם שלך.

* חיפוש שוק : Samsung Multiroom

או

◄ התקנגישה ליישום Samsung Multiroom

כדי לגשת ליישום Samsung Multiroom, לחץ על סמל היישום Multiroom בהתקן החכם שלך.

חיבור ה-SOUNDBAR לרשת

במכשיר החכם, בחר את היישום Samsung Multiroom.
פעל לפי ההוראות המופיעות על מסך המכשיר החכם.

- למידע נוסף, עיין במדריך באינטרנט.
  - מדריך באינטרנט: www.Samsung.com ← תמיכה ← חיפוש שם מוצר ← HW-J7500 או HW-J7501 הורדת קובץ PDF.
- בהתחברות לרשת קווית, השתדל להשתמש בכבל CAT 7 לחיבור.

HW-J7500_J7501_SQ_HEB_0529.indd 28 2015-05-29 2:00:32

עדכון תוכנה

HEB

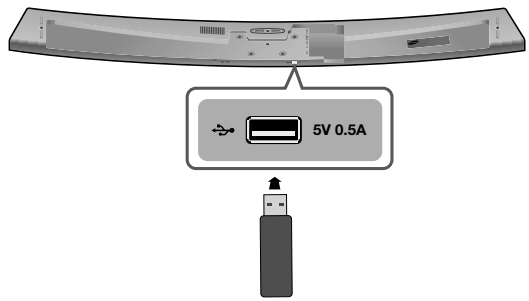

עדכון באמצעות USB

Samsung עשויה להציע בעתיד עדכונים לקושחת המערכת של Soundbar.

במידה ומוצע עדכון, ניתן לעדכן את הקושחה על-ידי חיבור התקן USB עם עדכון הקושחה ליציאת ה-USB של ה-Soundbar.

שימו לב שאם קיימים קובצי עדכון מרובים, עליך לטעון כל אחד בנפרד להתקן ה-USB ולהשתמש בו.

בקר באתר Samsung.com או צור קשר עם מרכז התמיכה של Samsung כדי לקבל מידע נוסף על הורדת קובצי עדכונים.

1. בזמן שה-Soundbar כבוי, חבר את התקן אחסון ה-USB המכיל את הקושחה אל יציאת ה-USB של ה-Soundbar.
2. נתק את כבל המתח, חבר אותו שוב והפעל אותו.
3. הפעל את ה-**UPDATE** Soundbar יופיע בתצוגה והעדכון יתחיל תוך שלוש שניות.
   - לאחר השלמת העדכון, ה-Soundbar יכובה ויופעל שוב באופן אוטומטי.

◄ אם לא הוצג UPDATE

1. כבה את ה-Soundbar, חבר התקן אחסון USB שמכיל קובצי עדכון ליציאת ה-USB של ה-Soundbar.
2. נתק את כבל המתח, חבר אותו שוב והפעל אותו.

- הכנס התקן USB המכיל את שדרוג הקושחה ליציאת ה-USB ביחידה הראשית.
- ייתכן ששדרוג הקושחה לא יפעל כהלכה אם קובצי שמע הנתמכים על-ידי ה-Soundbar שמורים בהתקן אחסון ה-USB.
- אין לכבות את המכשיר או לנתק את התקן ה-USB בעת החלת עדכונים. היחידה הראשית תכבה באופן אוטומטי לאחר שעדכון הקושחה יסתיים.

HW-J7500_J7501_SQ_HEB_0529.indd 29 2015-05-29 2:00:32

- לאחר העדכון, כל ההגדרות יתאפסו להגדרות היצרן.היחידה הראשית תכבה באופן אוטומטי לאחר שעדכון הקושחה יסתיים.

שים לב שעדכון הקושחה מאפס גם את חיבור הסאבוופר. אם החיבור לסאבוופר לא מתבצע באופן אוטומטי לאחר העדכון, עיין בעמוד 17. אם עדכון הקושחה נכשל, אנו ממליצים לפרמט את התקן ה-USB שוב ב-FAT16 ולנסות שוב.

- אין לפרמט את כונן ה-USB בפורמט NTFS. ה-Soundbar אינו תומך במערכת הקבצים NTFS.
- ייתכן שהתקן ה-USB אינו נתמך, בהתאם ליצרן.

עדכון אוטומטי

אפילו כשה-Soundbar כבוי, ה-Soundbar יבדוק את גרסת התוכנה האחרונה וימשיך לעדכן אם הוא מחובר לאינטרנט.

- ה-Soundbar מוגדר להריץ עדכון אוטומטי כברירת מחדל.
- כדי להשתמש בפונקציית העדכון האוטומטי Soundbar חייב להיות מחובר לאינטרנט.
- חיבור Wi-Fi ל-Soundbar יסתיים אם כבל החשמל נותק או אם זרק החשמל נותק. הפעל את ה-Soundbar והתחבר מחדש.

HW-J7500_J7501_SQ_HEB_0529.indd 30 2015-05-29 2:00:32

פתרון בעיות

בטרם תפנו לקבלת שירות, בדקו את הפרטים שלהלן.

המכשיר אינו נדלק.	
• האם כבל החשמל מחובר לשקע?	← חברו את כבל החשמל לשקע.

פונקציה מסוימת אינה פועלת בעת לחיצה על הלחצן.	
• האם ישנו חשמל סטטי באוויר?	← נתקו את כבל החשמל וחברו אותו שוב.

לא נשמעים צלילים.	
• האם פונקציית ה-השתק פועלת?	← לחצו על הלחצן (השתק) כדי לבטל את הפונקציה.
• האם עוצמת הקול מוגדרת לעוצמה הנמוכה ביותר?	← כוונן את עוצמת השמע.

השלט רחוק אינו פועל.	
• האם הסוללות מרוקנות?	← החליפו את הסוללות בסוללות חדשות.
• האם המרחק בין השלט רחוק לבין המכשיר גדול מדי?	← התקרבו למכשיר.

צימוד TV SoundConnect (צימוד לטלוויזיה) נכשל.	
• האם הטלוויזיה שלך תומכת ב-TV SoundConnect?	← TV SoundConnect נתמך בחלק מטלוויזיות Samsung שהושקו אחרי 2012. בדוק אם הטלוויזיה שלך תומכת ב-TV SoundConnect.
• האם הקושחה של הטלוויזיה מהגרסה האחרונה?	← עדכנו את הטלוויזיה לגרסת הקושחה העדכנית ביותר.
• האם אירעה תקלה בעת ההתחברות?	← צור קשר עם מרכז התמיכה של Samsung.
• אתחלו את מצב TV והתחברו שוב.	← לחץ לחיצה ארוכה על הלחצן ►II למשך חמש שניות כדי לאפס את חיבור TV SoundConnect.

נורית ה-LED האדומה בסאבוופר מהבהבת והסאבוופר אינו משמיע צליל.	
• ייתכן שהסאבוופר אינו מחובר ליחידה הראשית של המוצר.	← נסה לחבר שוב את הסאבוופר. (ראו עמוד 17)

הסאבוופר מזמזם ורוטט באופן ניכר.	
• נסה לכוונן את רעידות הסאבוופר.	← לחץ על הלחצן **WOOFER** בשלט רחוק כדי לכוונן את ערכו (בין 12-, 6- לבין 6+).

HW-J7500_J7501_SQ_HEB_0529.indd 31 2015-05-29 2:00:32

מפרטים

שם דגם	HW-J7501 / HW-J7500

כללי	USB		5 V / 0.5 A
	משקל	המכשיר	4 ק"ג
		סאבוופר (PS-WJ7501 / PS-WJ7500)	7.8 ק"ג
	מידות (רוחב x גובה x עומק)	המכשיר	1230 x 47.5 x 170 מ"מ
		סאבוופר (PS-WJ7501 / PS-WJ7500)	500 x 332 x 161 מ"מ
	טווח הטמפרטורה בפעולה		+5 °C עד +35 °C
	טווח אחוזי הלחות בפעולה		10 % עד 75 %
מגבר	דירוג צריכת חשמל	המכשיר	20 ואט/ערוץ x 8, 8 OHM, THD = 10 %, 1 קילוהרץ
		סאבוופר (PS-WJ7501 / PS-WJ7500)	160 ואט, 3 OHM, THD = 10 %, 100 הרץ
	יחס אות לרעש (קלט אנלוגי)		65 דציבלים
	הפרדה (1 קילוהרץ)		65 דציבלים

* הערכים של יחס אות לרעש, עיוות, הפרדה ורגישות שימושית מבוססים על המידות שנקבעו על פי הקווים מנחים של ארגון AES (Audio Engineering Society).

* מפרט נומינלי

- Samsung Electronics Co., Ltd שומרת את הזכות לשנות את המפרטים ללא התרעה.
- המשקל והמידות המצוינים הם משוערים.
- לקבלת מידע אודות אספקה וצריכת חשמל, עיינו בתווית המודבקת על-גבי המכשיר.

※ **הודעת רשיון קוד פתוח**

- לשאלות ובקשות בנוגע למקור פתוח, צור קשר עם Samsung בדוא"ל (oss.request@samsung.com).

HW-J7500_J7501_SQ_HEB_0529.indd 32 2015-05-29 2:00:32

© 2015 Samsung Electronics Co., Ltd. All rights reserved.

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care centre.

© 2015 Samsung Electronics Co.,Ltd כל הזכויות שמורות.

יצירת קשר עם SAMSUNG WORLD WIDE

אם יש לכם שאלות או הערות הנוגעות למוצרי Samsung, אנא צרו קשר עם מרכז שירות הלקוחות של SAMSUNG.

Web Site	☎ Contact Centre	Area
		Africa ▪
www.samsung.com/support	0860 SAMSUNG (726 7864)	SOUTH AFRICA
	8007260000	BOTSWANA
	08 197 267 864	NAMIBIA
	0211 350370	ZAMBIA
	23052574020	MAURITIUS
	262508869	REUNION
	847267864 / 827267864	MOZAMBIQUE
www.samsung.com/africa_en/support	0800-726-7864	NIGERIA
	0800-10077 0302-200077	GHANA
www.samsung.com/africa_fr/support	8000 0077	COTE D'IVOIRE
	800-00-0077	SENEGAL
	7095-0077	CAMEROON
www.samsung.com/support	0800 545 545	KENYA
	0800 300 300	UGANDA
	0800 755 755 / 0685 889 900	TANZANIA
	9999	RWANDA
	200	BURUNDI
	499999	DRC
	1969	SUDAN

Web Site	☎ Contact Centre	Area
		Middle East ▪
www.samsung.com/eg/support	08000-7267864 16580	EGYPT
www.samsung.com/n_africa/support	021 36 11 00	ALGERIA
www.samsung.com/iran/support	021-8255	IRAN
www.samsung.com/sa/support www.samsung.com/sa_en/support (English)	8002474357	SAUDI ARABIA
www.samsung.com/pk/support	0800-Samsung (72678)	PAKISTAN
www.samsung.com/n_africa/support	80-1000-12	TUNISIA
www.samsung.com/ae/support (English) www.samsung.com/ae_ar/support (Arabic)	800-SAMSUNG (800 - 726 7864)	U.A.E
	800-SAMSUNG (800 - 726 7864)	OMAN
	183-CALL (183-2255)	KUWAIT
	8000-GSAM (8000-4726)	BAHRAIN
	800-CALL (800-2255)	QATAR
www.samsung.com/tr/support	444 77 11	TURKEY
www.samsung.com/Levant/support (English)	0800-22273 06 5777444	JORDAN
	18252273	SYRIA
www.samsung.com/n_africa/support	080 100 22 55	MOROCCO